

NYCECC2020 -ASHRAE2016 **ENERGY CODE**

APPLICATION GUIDE



SENSORWORX®



SENSORWORX®

WHO IS **SENSORWORX**?

SENSORWORX products are designed, produced, and sold by BLP Technologies, Inc. of Wallingford, Connecticut. Founded in 2017 by engineers with decades of experience in lighting controls, the team behind **SENSORWORX** has an unmatched resume of bringing high quality and innovative products to the lighting and building control marketplace. With particular expertise in occupancy sensing, the **SENSORWORX** brand is the new standard of quality and technology excellence in commercial lighting controls.

WIRED & WIRELESS **SOLUTIONS**

Traditional wired controls are the simplest and most reliable solution for many applications. However, wireless room controls are a great alternative for projects with challenging installation environments. While each solution has unique attributes, the user experience and sequence of operation they deliver should be consistent regardless.

SENSORWORX provides both wired and wireless options in our portfolio of products that all share a modern look, utilize common mounting methods, and deliver reliable performance. This ensures a consistent experience for both installers and end users.

MADE IN **AMERICA**

We take pride in our work. We have pride in our team and know that quality requires attention to detail at all levels of the manufacturing process. That is why **SENSORWORX** proudly manufactures lighting controls in the United States.





TABLE OF CONTENTS


CODE REQUIREMENT OVERVIEW	4 – 5
APPLICATION GUIDE EXAMPLE	6 – 7
LARGE PRIVATE OFFICE	Wired 8 Wireless 9
SMALL OFFICE	Wired Option 1 10 Wired Option 2 11 Wireless Option 1 12
STORAGE ROOM / CLOSET	Wired 13
COPY / PRINT ROOM	Wired 14 Wireless 15
PRIVATE RESTROOM	Wired Option 1 16 Wired Option 2 17 Wireless 18
PUBLIC RESTROOM	Wireless 19 Wired Option 1 20 Wired Option 2 21
OPEN OFFICE w/ WINDOWS	Wired 22 Wireless 24
OPEN OFFICE w/o WINDOWS	Wired 23 Wireless 25
CLASSROOM	Wired Option 1 26 Wired Option 2 27 Wireless Option 1 28 Wireless Option 2 29
BREAKROOM / LOUNGE	Small - Wired 30 Large - Wired 31
CORRIDOR / HALLWAY	Basic - Wired 33 w/T-Intersection - Wired 32
CONFERENCE ROOM	Wired 34 Wireless 35
STAIRWELL	Wired Option 1 36 Wired Option 2 37
LOBBY	Wired 38 Wireless 39
PRODUCT GALLERY	41



CODE REQUIREMENT OVERVIEW

This table outlines lighting control requirements for several building spaces. If the code is not specific or complete regarding controls requirements for a certain area, the table reflects the most common and recommended control scheme.

For more detailed code requirements refer to the <https://codes.iccsafe.org/content/ASHRAE9012016P1>

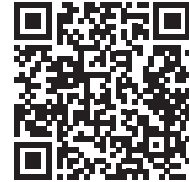

	CODE REQUIREMENTS		CODE PROVISION #	SUMMARY
SHUT OFF CONTROLS	Occupancy Sensor Controls		9.4.1.1 (g) & (h) 9.4.1.2 (b)	Requires lighting be controlled by an occupancy sensor.
	Time Switch Controls		9.4.1.1 (i) 9.4.1.2 (a) & (c) 9.4.1.4 (a), (b), & (c)	Each area of the building not provided with an occupancy sensor shall be provided with time switch controls.
OCCUPANCY SENSOR FUNCTIONALITY	OFF	Full Auto-Off	9.4.1.1 (h)	Where sensors are used, requires lighting be automatically turned off within 15 minutes or less of all occupants leaving the space.
		Partial Auto-Off	9.4.1.1 (g) 9.4.1.2 (b) & (c) 9.4.1.4 (c)	When controlling areas where continuous lighting is required for safety, only reduce lights to a low level when unoccupied.
	ON	Full Auto On	9.4.1.1 (g) & (h)	Allows lighting to be automatically turned on to the maximum power or high trim.
		Partial Auto On	9.4.1.1 (c)	Allows lighting to be automatically turned on to not more than 50% power.
		Manual On	9.4.1.1 (b)	Allows lighting to be manually turned on.
MANUAL CONTROL	Manual Switch		9.4.1.1 (a)	Requires a readily accessible manual control that allows occupants to turn lights off. Manual control should be located where the controlled lights are visible or shall indicate the area served and their status.
	Manual Dimming / Light Reduction		9.4.1.1 (a) 9.4.1.1 (d)	Allow the occupancy to reduce the lighting load by either continuous dimming or at least one level between 30% and 70% of full output within the space. Some exceptions apply within the code.
DAYLIGHT CONTROL	Sidelit or Toplit Daylight Zone Wattage	> 150 W	9.4.1.1 (e) 9.4.1.1 (f) 9.4.1.1 (d) 9.4.1.1 (a)	Daylight Responsive Controls are required as follows: • Toplit zones and all sidelit zones facing different cardinal directions shall be controlled independently from each other. • Shall be capable of complete shutoff of controlled lighting. • Dim continuously from full light output to 15% of full or lower. • Have readily accessible calibration mechanisms and can be calibrated within the space. • All daylight zones must be controlled separately (Including Primary and Secondary Zones). See full code for definitions of daylight zones.
		< 150 W		Daylight responsive controls are optional but recommended.
RECEPTACLE CONTROL	Auto On / Off		8.4.2	50% of all wall and 25% of modular furniture receptacles shall be turned off 20 min or less upon vacancy.



ROOM/AREA TYPES

CLASSROOMS / LECTURE / TRAINING ROOMS	CONFERENCE / MEETING ROOMS	PRIVATE OFFICES	OPEN OFFICES	RESTROOMS	HALLWAYS / CORRIDORS	LOBBY	COPY / PRINT ROOMS	STORAGE ROOMS	JANITORIAL CLOSETS	BREAKROOM / LOUNGE	STAIRWELL
PAGES 26-29	PAGES 34-35	PAGES 8-12	PAGES 22-25	PAGES 16-21	PAGES 32-33	PAGES 38-39	PAGES 14-15	PAGES 13	PAGES 13	PAGES 30-31	PAGES 36-37
			OR 		OR 	OR 					OR
					OR 	OR 					OR
OR 	OR 	OR 	OR 				OR 	OR 	OR 	OR 	
OR 	OR 	OR 	OR 	OR 	OR 	OR 	OR 	OR 	OR 	OR 	OR

Required by code provision


Recommended method between compliant options

Alternative compliant option to recommendation



STRATEGIES FOR ADDING A SECONDARY DAYLIGHTING ZONE

Where required by the code, a secondary daylighting zone can be easily added to the Applications shown in this guide.

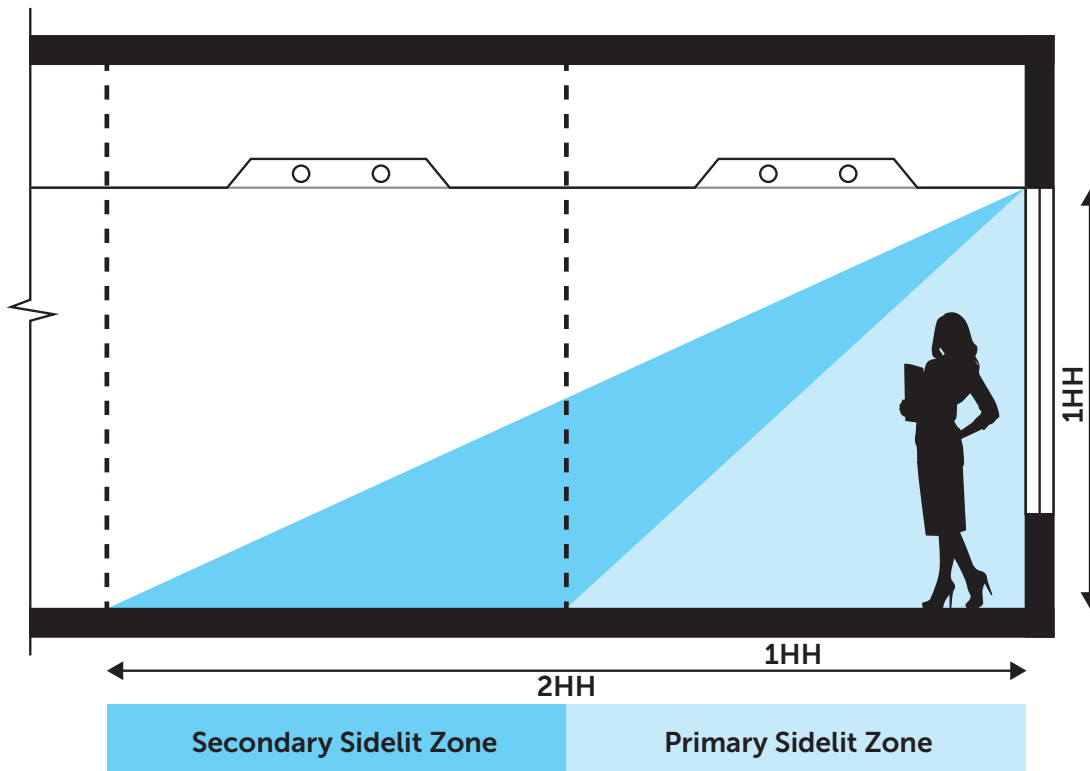

FOR WIRELESS...

Simply add a SWX-950-D2 Series wireless power pack in the secondary daylighting zone to create independent controls to meet the code. Pair this secondary daylighting zone power pack to the primary daylighting zone power pack via the **Leader/Follower** mode and follow the setup instructions to make the zones a percentage brighter for the secondary daylighting zone power pack. For additional manual control, add wireless wall switches/dimmers as needed. Alternatively, a SWX-950-AX-D2 model power packs and SWX-801 series wired wall switches could be used to add manual switching to one or both zones.

LEADER / FOLLOWER OPERATION & MULTI-ZONE DAYLIGHT HARVESTING


- Power pack controllers can be configured to directly “follow” the state and dim level of another wirelessly linked power pack controller (referred to as the “leader”). Leader/follower functionality is intended for applications where two power pack are to be controlled together, but where only one (designated the leader) is within range of the wireless switch or sensor. The follower power pack must still be within range of the leader power pack.
- A power pack in follower mode does not listen to any other wireless devices except the leader to which it is paired. Therefore, all wireless devices in a zone must be in range of the leader.
- The “leader/follower” functionality of power pack controllers can also be used to accommodate multi-zone daylight harvesting applications. The leader would be wired to control the primary daylight zone that contains the daylight harvesting photocell, with one or more follower power packs controlling the lights in secondary daylight zones (i.e. zones located further from the windows). The follower packs can then be configured to control the lights a percentage brighter than the leader.



FOR OUR WIRED STAND-ALONE SYSTEM...

Add a 2nd SWX-250-1-D daylight harvesting photocell and a 2nd power pack to control the lights in the secondary daylighting zone independent of the primary zone as required to meet the code. Shared or per zone occupancy sensors and manual controls can then be provided as necessary (note: SWX-900-AX version power packs and SWX-800 series low voltage switches required to provide manual control).

DAYLIGHT HARVESTING + OCCUPANCY SENSOR(S) APPLICATION

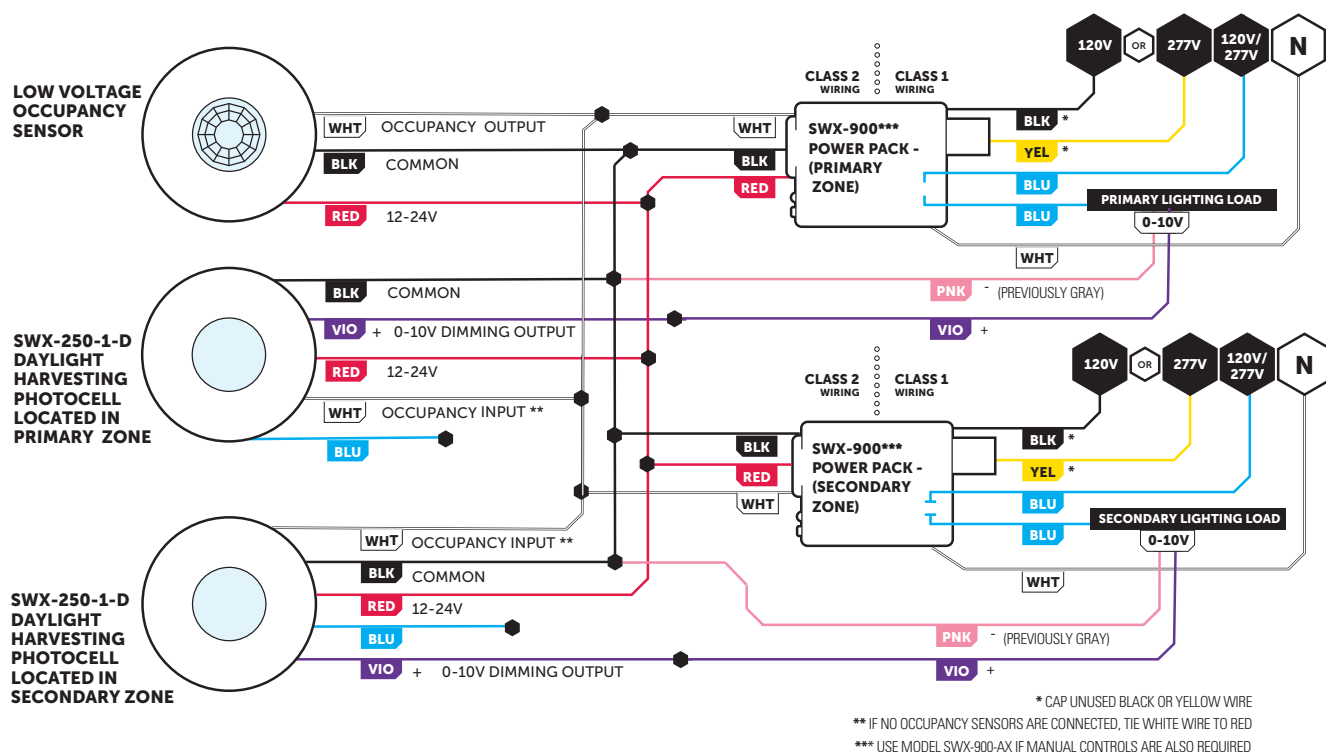



APPLICATION GUIDE EXAMPLE

IECC 2018

LARGE PRIVATE OFFICE

WIRED

KEY

- TO LINE VOLTAGE CONNECTIONS
- TO 0-10V LIGHTING
- LOW VOLTAGE WIRING (18 AWG)

BILL OF MATERIAL

DIAGRAM #	QTY	MODEL #	DESCRIPTION
1	1	SWX-221-1	Dual Technology (PIR/Acoustic) Occupancy Sensor, Small Motion, Ceiling Mount 360°
2	1	SWX-803-xx	Dimming Wall Station (0-10V), <xx = color>
3	1	SWX-900-AX	Power Pack Controller w/ Auxiliary Switch Input, 120/277 VAC

SEQUENCE OF OPERATION

- Lighting switched on manually to last user level or automatically to 50% upon occupancy.
- On/off & raise/lower control of lighting via dimmer switch.
- Lighting automatically dims according to daylight contribution.
- Lighting turns off automatically after occupants leave the space.

ADDITIONAL DESIGN CONSIDERATIONS

- Alternative corner mount sensor model **SWX-421-1**.
- Maximum lighting level can be task tuned to increase energy savings.
- For rooms with windows, change sensor to **SWX-231-D** to add daylight harvesting.
- To provide an occupancy contact closure signal to an HVAC system, change the sensor to a **SWX-221-1-AR** model.
- Although not required by code, receptacle control can be added by connecting a second power pack.

SUPPORTED CODE REQUIREMENTS

Occupancy Sensor Control
C405.2.1 & C405.2.1.1(1)

Manual Control - Switch
C405.2.2.3

Daylight Responsive Control
C405.2.3**

Manual On-Off/Partial Auto On
C405.2.1.1(2)

Manual Light Reduction Control - Dimmer
C405.2.2.2*

*RECOMMENDED BUT NOT REQUIRED BY CODE.
**NOT REQUIRED FOR ROOMS WITH < 150W OF LIGHTING IN PRIMARY DAYLIGHT ZONE. SEE DESIGN CONSIDERATION #3 FOR NECESSARY BILL OF MATERIAL CHANGE.

IECC 2018 | SENSORWORX Application Guide

– 8 –

203.678.4224 | SENSORWORX.COM



ROOM DESCRIPTION

Room Description

SOLUTION DESCRIPTION

Wired vs wireless solution indication

LAYOUT KEY

Listing of any symbols and line types used in the application drawings

APPLICATION DIAGRAM

Basic room drawing with overlaid control device icons and wiring basics

BILL OF MATERIALS

Model numbers, descriptions, and quantities of the referenced **SENSORWORX** controls

SEQUENCE OF OPERATION

Full summary of the spaces operation using the specified design

ADDITIONAL DESIGN CONSIDERATIONS

Options and/or recommendations to specified design


SUPPORTED CODE REQUIREMENTS

Listing of applicable Code Sections



KEY

- TO LINE VOLTAGE CONNECTIONS
- TO 0-10V LIGHTING
- LOW VOLTAGE WIRING (18 AWG)

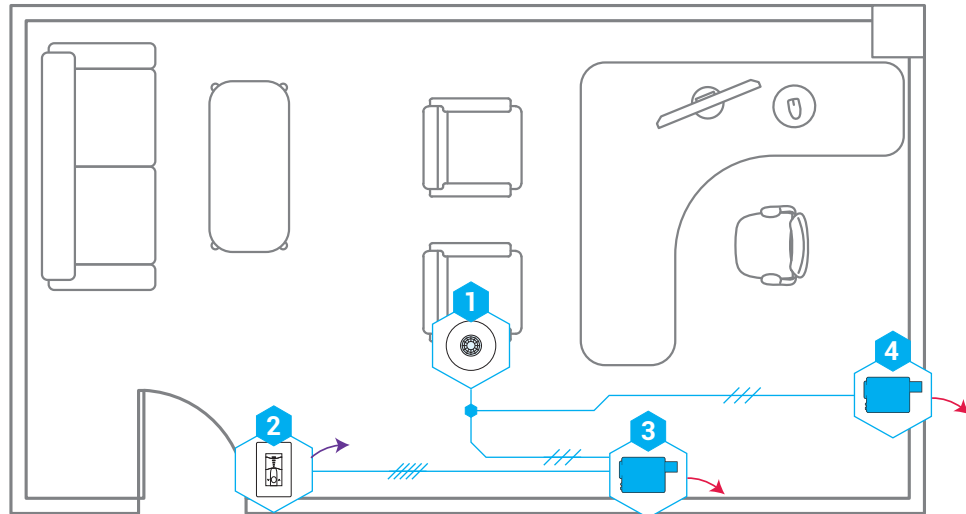

BILL OF MATERIAL

DIAGRAM #	QTY	MODEL #	DESCRIPTION
1	1	SWX-221-1	Dual Technology (PIR/Acoustic) Occupancy Sensor, Small Motion, Ceiling Mount 360°
2	1	SWX-803-xx	Dimming Wall Station (0-10V), <xx = color>
3	1	SWX-900-AX	Power Pack Controller w/ Auxiliary Switch Input, 120/277 VAC
4	1	SWX-900	Power Pack Controller, 120/277 VAC (For Receptacle Control)

SEQUENCE OF OPERATION

1. Lighting switched on manually to last user level or automatically to 50% upon occupancy.
2. On/off & raise/lower control of lighting via dimmer switch.
3. Lighting automatically dims according to daylight contribution.
4. Lighting turns off automatically after occupants leave the space.

ADDITIONAL DESIGN CONSIDERATIONS

1. Alternative corner mount sensor model **SWX-421-1**.
2. Maximum lighting level can be task tuned to increase energy savings.
3. For rooms with windows, change sensor to **SWX-231-D** to add daylight harvesting.
4. To provide an occupancy contact closure signal to an HVAC system, change the sensor to a **SWX-221-1-AR** model.

NOTE: RECEPTACLES WILL AUTOMATICALLY TURN ON UPON OCCUPIED AND TURN OFF WITH THE LIGHTS AFTER OCCUPANTS LEAVE THE SPACE

SUPPORTED CODE REQUIREMENTS

Occupancy Sensor Control
9.4.1.1 (g), 9.4.1.1 (h), & 9.4.1.2 (b)

Manual Control - Switch
9.4.1.1 (a)

Daylight Responsive Control
9.4.1.1 (e), 9.4.1.1 (f), 9.4.1.2 (d), & 9.4.1.4 (a)**

Manual On-Off/Partial Auto On
9.4.1.1 (b) & 9.4.1.1 (c)

Manual Light Reduction Control - Dimmer
9.4.1.1 (a) & 9.4.1.1 (d)*


Receptacle Controls
8.4.2

*RECOMMENDED BUT NOT REQUIRED BY CODE.

**NOT REQUIRED FOR ROOMS WITH < 150W OF LIGHTING IN PRIMARY DAYLIGHT ZONE. SEE DESIGN CONSIDERATION #3 FOR NECESSARY BILL OF MATERIAL CHANGE.



WIRELESS

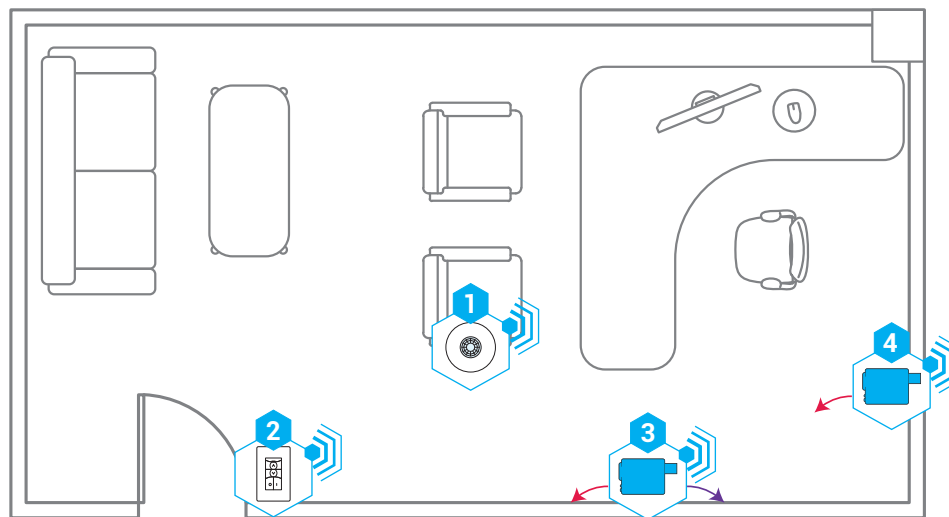

KEY

- TO LINE VOLTAGE CONNECTIONS
- TO 0-10V LIGHTING
- WIRELESS CONNECTION

BILL OF MATERIAL

DIAGRAM #	QTY	MODEL #	DESCRIPTION
1	1	SWX-221-B	Wireless Dual Technology (PIR/Acoustic) Occupancy Sensor, Small Motion, Ceiling Mount 360°
2	1	SWX-854-B-xx	Wireless Dimming Remote Wall Station, <xx = color>
3	1	SWX-950-D2	Wireless Power Pack Controller w/ Dimming (0-10V), 120/277 VAC
4	1	SWX-950	Wireless Power Pack Controller, 120/277 VAC (For Receptacle Control)

SEQUENCE OF OPERATION

1. Lighting switched on manually to last user level or automatically to 50% upon occupancy.
2. On/off & raise/lower control of lighting via dimmer switch.
3. Lighting automatically dims according to daylight contribution.
4. Lighting turns off automatically after occupants leave the space.

NOTE: RECEPTACLES WILL AUTOMATICALLY TURN ON UPON OCCUPIED AND TURN OFF WITH THE LIGHTS AFTER OCCUPANTS LEAVE THE SPACE

ADDITIONAL DESIGN CONSIDERATIONS

1. Alternative corner mount sensor model **SWX-421-B**.
2. Maximum lighting level can be task tuned to increase energy savings.
3. For rooms with windows, add a **SWX-250-B** daylight harvesting photocell.
4. To provide an occupancy contact closure signal to an HVAC system, change the power pack to a **SWX-950-AX-D2** model and add a **SWX-910-AR** auxiliary relay pack.

SUPPORTED CODE REQUIREMENTS

Occupancy Sensor Control
9.4.1.1 (g), 9.4.1.1 (h), & 9.4.1.2 (b)

Manual Control - Switch
9.4.1.1 (a)

Daylight Responsive Control
9.4.1.1 (e), 9.4.1.1 (f), 9.4.1.2 (d), 9.4.1.4 (a)**

Manual On-Off/Partial Auto On
9.4.1.1 (b) & 9.4.1.1 (c)

Manual Light Reduction Control - Dimmer
9.4.1.1 (a) & 9.4.1.1 (d)*

Receptacle Controls
8.4.2


*RECOMMENDED BUT NOT REQUIRED BY CODE.

**NOT REQUIRED FOR ROOMS WITH < 150W OF LIGHTING IN PRIMARY DAYLIGHT ZONE. SEE DESIGN CONSIDERATION #3 FOR NECESSARY BILL OF MATERIAL CHANGE.



KEY

- TO LINE VOLTAGE CONNECTIONS
- TO 0-10V LIGHTING
- LOW VOLTAGE WIRING (18 AWG)

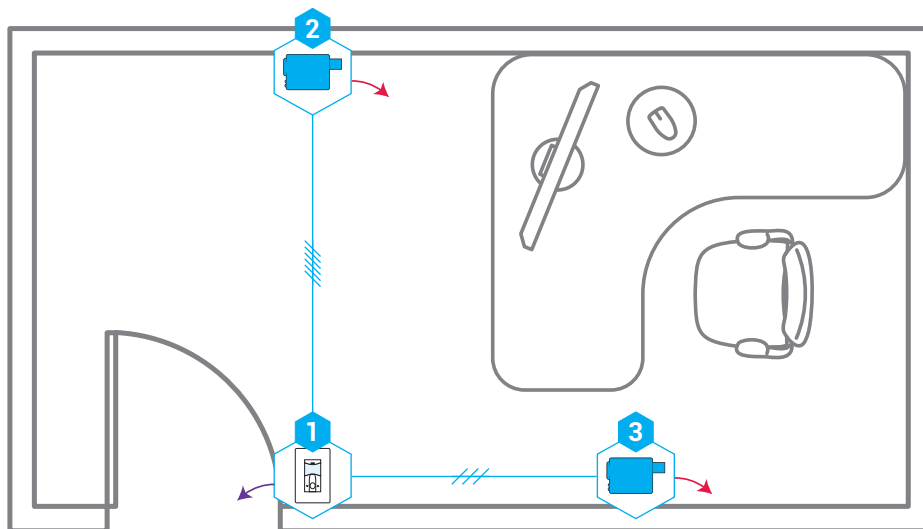

BILL OF MATERIAL

DIAGRAM #	QTY	MODEL #	DESCRIPTION
1	1	SWX-121-1-D-MS	Dual Technology (PIR/Acoustic) Wall Switch Occupancy Sensor w/ Dimming (0-10V), Low Voltage, <xx = color>
2	1	SWX-900-AX	Power Pack Controller, 120/277 VAC (For Lighting)
3	1	SWX-900	Power Pack Controller, 120/277 VAC (For Receptacle Control)

SEQUENCE OF OPERATION

- Lighting turns on automatically to 50% upon occupancy (default) or manually switched on to last user level.
- Receptacle turns on automatically
- On/off & raise/lower control of lighting via dimmer switch.
- Lighting & receptacle turns off automatically after occupants leave the space.

ADDITIONAL DESIGN CONSIDERATIONS

- Maximum lighting level can be task tuned to increase energy savings.

SUPPORTED CODE REQUIREMENTS

Occupancy Sensor Control
9.4.1.1 (g), 9.4.1.1 (h), & 9.4.1.2 (b)


Manual Control - Switch
9.4.1.1 (a)

Receptacle Controls
8.4.2

Manual On-Off/Partial Auto On
9.4.1.1 (b) & 9.4.1.1 (c)

Manual Light Reduction Control - Dimmer
9.4.1.1 (a) & 9.4.1.1 (d)*

*RECOMMENDED BUT NOT REQUIRED BY CODE

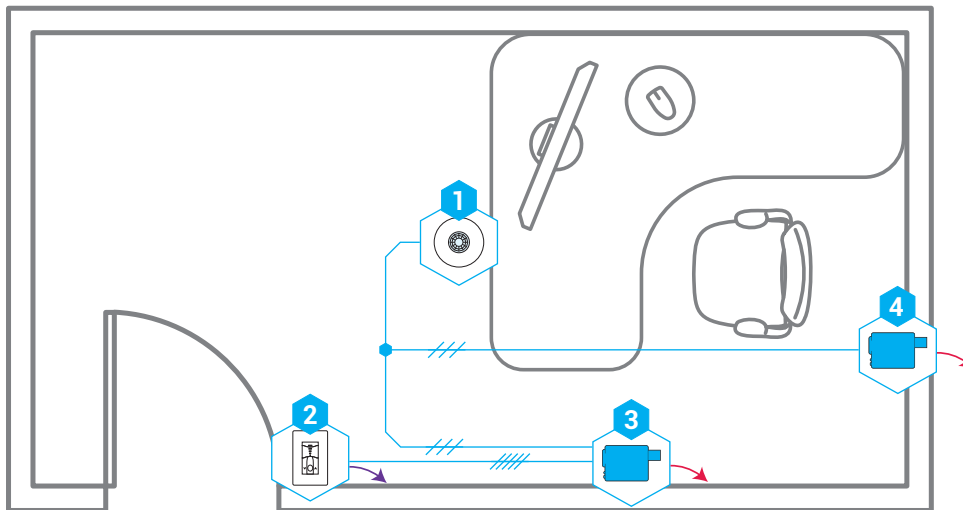

KEY

- TO LINE VOLTAGE CONNECTIONS
- TO 0-10V LIGHTING
- LOW VOLTAGE WIRING (18 AWG)

BILL OF MATERIAL

DIAGRAM #	QTY	MODEL #	DESCRIPTION
1	1	SWX-221-1	Dual Technology (PIR/Acoustic) Occupancy Sensor, Small Motion, Ceiling Mount 360°
2	1	SWX-803-xx	Dimming Wall Station (0-10V), <xx = color>
3	1	SWX-900-AX	Power Pack Controller w/ Auxiliary Switch Input, 120/277 VAC
4	1	SWX-900	Power Pack Controller, 120/277 VAC (For Receptacle Control)

SEQUENCE OF OPERATION

- Lighting switched on manually to last user level or automatically to 50% upon occupancy.
- On/off & raise/lower control of lighting via dimmer switch.
- Lighting turns off automatically after occupants leave the space.

NOTE: RECEPTACLES WILL AUTOMATICALLY TURN ON UPON OCCUPIED AND TURN OFF WITH THE LIGHTS AFTER OCCUPANTS LEAVE THE SPACE

ADDITIONAL DESIGN CONSIDERATIONS

- Maximum lighting level can be task tuned to increase energy savings.
- Make lights automatically dim according to daylight contribution (see designs for Large Private Office).
- To provide an occupancy contact closure signal to an HVAC system, change the sensor to a **SWX-221-1-AR** model.

SUPPORTED CODE REQUIREMENTS

Occupancy Sensor Control
9.4.1.1 (g), 9.4.1.1 (h), & 9.4.1.2 (b)

Manual Control - Switch
9.4.1.1 (a)

Receptacle Controls
8.4.2

Manual On-Off/Partial Auto On
9.4.1.1 (b) & 9.4.1.1 (c)

Manual Light Reduction Control - Dimmer
9.4.1.1 (a) & 9.4.1.1 (d)*


*RECOMMENDED BUT NOT REQUIRED BY CODE



KEY

TO LINE VOLTAGE
CONNECTIONS

WIRELESS
CONNECTION

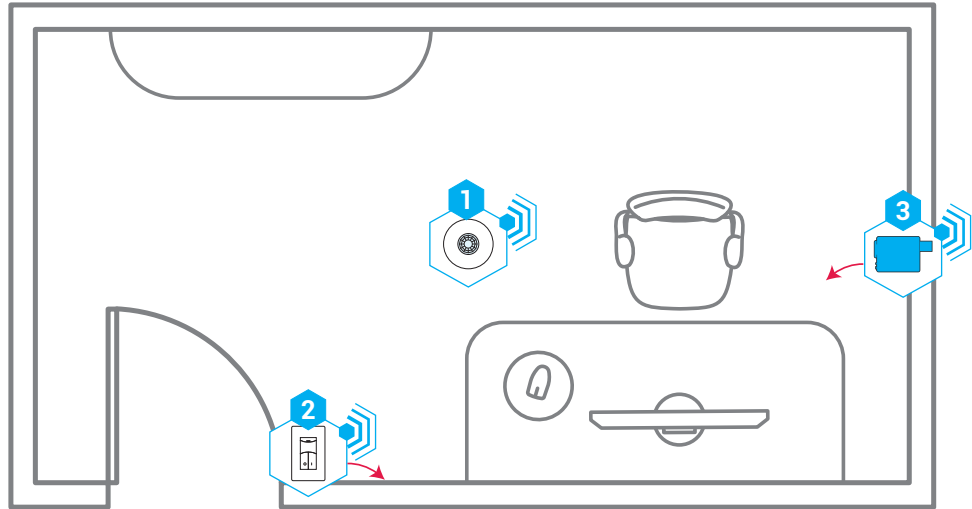

BILL OF MATERIAL

DIAGRAM #	QTY	MODEL #	DESCRIPTION
1	1	SWX-221-B	Wireless Dual Technology (PIR/Acoustic) Occupancy Sensor, Small Motion, Ceiling Mount 360°
2	1	SWX-851-xx	Wireless Wall Switch Controller, 120/277VAC, No Neutral Required, <xx = color>
3	1	SWX-950	Power Pack Controller, 120/277 VAC (For Receptacle Control)

SEQUENCE OF OPERATION

1. Lighting switched on manually via wall switch.
2. Lighting turns off automatically after occupants leave the space.

ADDITIONAL DESIGN
CONSIDERATIONS

1. Alternative corner mount sensor model **SWX-401-B**.

NOTE: RECEPTACLES WILL AUTOMATICALLY TURN ON UPON OCCUPIED AND TURN OFF WITH THE LIGHTS AFTER OCCUPANTS LEAVE THE SPACE

SUPPORTED CODE REQUIREMENTS

Occupancy Sensor Control
9.4.1.1 (g), 9.4.1.1 (h), & 9.4.1.2 (b)


Manual Control - Switch
9.4.1.1 (a)

Manual On-Off/Partial Auto On
9.4.1.1 (b) & 9.4.1.1 (c)

Receptacle Controls
8.4.2



WIRED

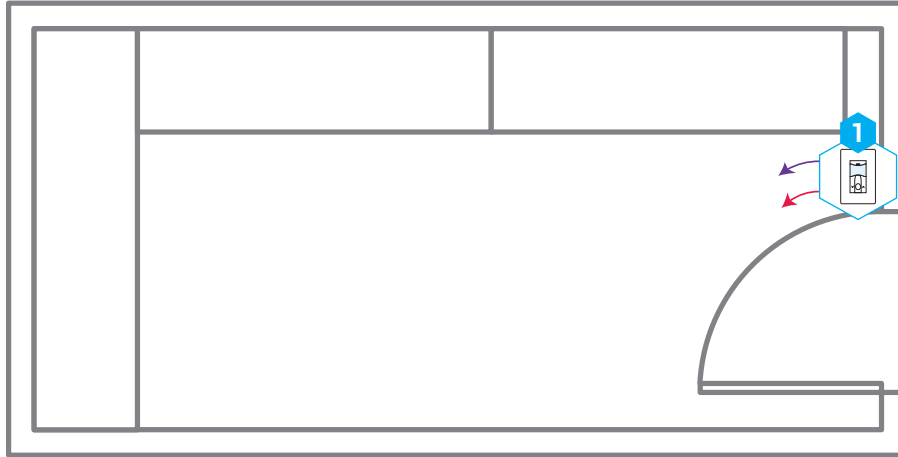

KEY

- TO LINE VOLTAGE CONNECTIONS
- TO 0-10V LIGHTING

BILL OF MATERIAL

DIAGRAM #	QTY	MODEL #	DESCRIPTION
1	1	SWX-101-D-xx	PIR Wall Switch Occupancy Sensor w/ Dimming (0-10V), 120/277 VAC, <xx = color>

SEQUENCE OF OPERATION

1. Lighting turns on automatically to 50% upon occupancy (default) or manually switched on to last user level.
2. On/off & raise/lower control of lighting via dimmer switch.
3. Lighting turns off automatically after occupants leave the space.

ADDITIONAL DESIGN CONSIDERATIONS

1. Maximum lighting level can be task tuned to increase energy savings.
2. For a compliant non-dimming solution, use a **SWX-103-xx**.
3. Although not required by code, receptacle control can be achieved by adding a **SWX-900** power pack wired on the load side of the wall switch sensor.

SUPPORTED CODE REQUIREMENTS

Occupancy Sensor Control
9.4.1.1 (g), 9.4.1.1 (h), & 9.4.1.2 (b)

Manual Control - Switch
9.4.1.1 (a)

Manual On-Off/Partial Auto On
9.4.1.1 (b) & 9.4.1.1 (c)


Manual Light Reduction Control - Dimmer
9.4.1.1 (a) & 9.4.1.1 (d)*

*RECOMMENDED BUT NOT REQUIRED BY CODE



KEY

TO LINE VOLTAGE
CONNECTIONS

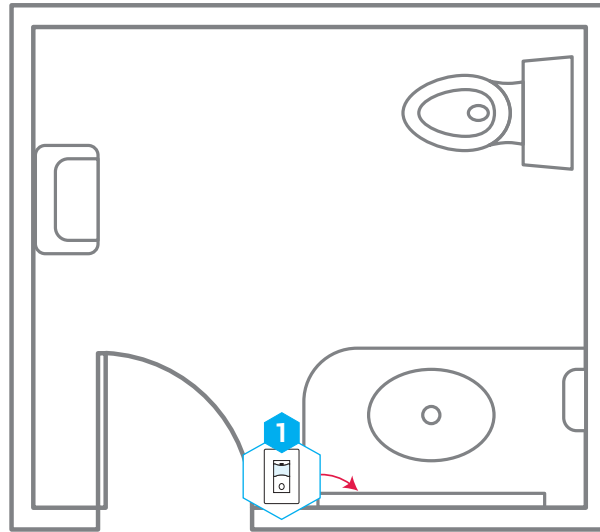

BILL OF MATERIAL

DIAGRAM #	QTY	MODEL #	DESCRIPTION
1	1	SWX-121-xx	Dual Technology (PIR/Acoustic) Wall Switch Occupancy Sensor, 120/277 VAC, No Neutral Required, <xx = color>

SEQUENCE OF OPERATION

1. Lighting switched on automatically to full bright.
2. On/off manual control of lighting.
3. Lighting turns off automatically after occupants leave the space.

ADDITIONAL DESIGN CONSIDERATIONS


1. If no stalls are present, a PIR only sensor (model **SWX-101-xx**) may be substituted as a value engineered option.
2. To control a ventilation fan or secondary lighting load, use a sensor and “sidecar” switch kit (model **SWX-122-xx**).

SUPPORTED CODE REQUIREMENTS

Occupancy Sensor Control
9.4.1.1 (g), 9.4.1.1 (h), & 9.4.1.2 (b)

Manual Control - Switch
9.4.1.1 (a)

Auto On to Full Allowed
9.4.1.1 (g) & 9.4.1.1 (h)

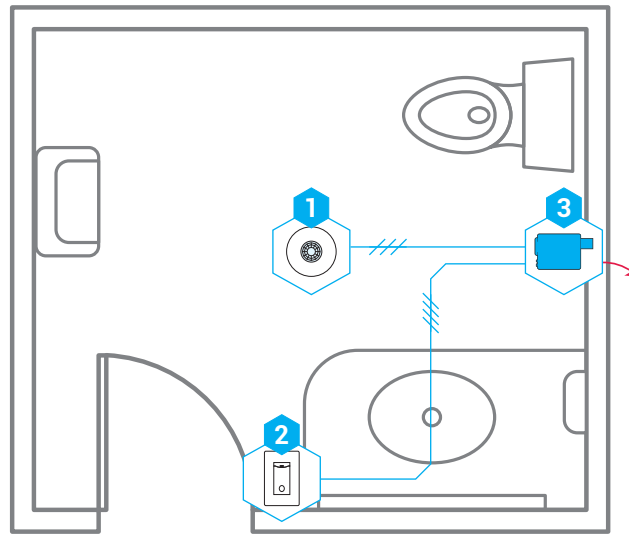

KEY

-  TO LINE VOLTAGE CONNECTIONS
 LOW VOLTAGE WIRING (18 AWG)

BILL OF MATERIAL

DIAGRAM #	QTY	MODEL #	DESCRIPTION
1	1	SWX-221-1	Dual Technology (PIR/Acoustic) Occupancy Sensor, Small Motion, Ceiling Mount 360°
2	1	SWX-801-xx	On/Off Wall Switch - Low Voltage, <xx = color>
3	1	SWX-900-AX	Power Pack Controller w/ Auxiliary Switch Input, 120/277 VAC

SEQUENCE OF OPERATION

1. Lighting switched on automatically to full bright.
2. On/off manual control of lighting.
3. Lighting turns off automatically after occupants leave the space.

ADDITIONAL DESIGN CONSIDERATIONS

1. If no stalls are present, a PIR only sensor (model **SWX-201-1**) may be substituted as a value engineered option.
2. To control a ventilation fan or secondary lighting load(s), add one or more secondary relay packs (model **SWX-910**).
3. To provide an occupancy contact closure signal to an HVAC system, change the sensor to a **SWX-221-1-AR** model.

SUPPORTED CODE REQUIREMENTS

Occupancy Sensor Control
9.4.1.1 (g), 9.4.1.1 (h), & 9.4.1.2 (b)

Manual Control - Switch
9.4.1.1 (a)

Auto On to Full Allowed
9.4.1.1 (g) & 9.4.1.1 (h)




KEY

TO LINE VOLTAGE
CONNECTIONS



WIRELESS
CONNECTION

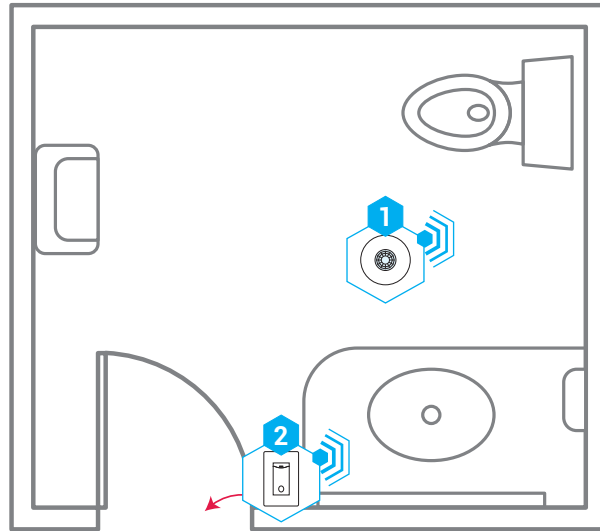

BILL OF MATERIAL

DIAGRAM #	QTY	MODEL #	DESCRIPTION
1	1	SWX-221-B	Dual Technology (PIR/Acoustic) Occupancy Sensor, Small Motion, Ceiling Mount 360°
2	1	SWX-851-xx	Wireless On/Off Wall Switch, 120/277 VAC, No Neutral Required, <xx = color>

SEQUENCE OF OPERATION

1. Lighting switched on automatically to full bright.
2. On/off manual control of lighting.
3. Lighting turns off automatically after occupants leave the space.

ADDITIONAL DESIGN CONSIDERATIONS

1. If no stalls are present, a PIR only sensor (model **SWX-201-B**) may be substituted as a value engineered option.
2. To control a ventilation fan or secondary lighting load(s), add one or more wireless power packs (model **SWX-950**).

SUPPORTED CODE REQUIREMENTS


Occupancy Sensor Control
9.4.1.1 (g), 9.4.1.1 (h), & 9.4.1.2 (b)

Manual Control - Switch
9.4.1.1 (a)

Auto On to Full Allowed
9.4.1.1 (g) & 9.4.1.1 (h)



WIRELESS

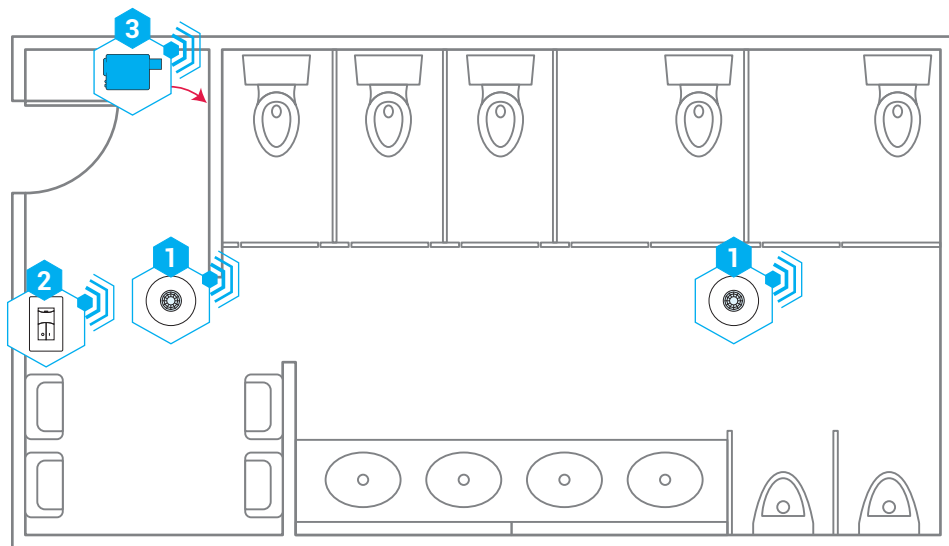

KEY

TO LINE VOLTAGE CONNECTIONS

WIRELESS CONNECTION

BILL OF MATERIAL

DIAGRAM #	QTY	MODEL #	DESCRIPTION
1	2	SWX-221-B	Wireless Dual Technology (PIR/Acoustic) Occupancy Sensor, Small Motion, Ceiling Mount 360°
2	1	SWX-852-B-xx	Wireless Remote On/Off Wall Station, <xx = color>
3	1	SWX-950	Wireless Power Pack Controller, 120/277 VAC

SEQUENCE OF OPERATION

1. Lighting switched on automatically to full bright.
2. On/off manual control of lighting.
3. Lighting turns off automatically after occupants leave the space.

ADDITIONAL DESIGN CONSIDERATIONS

1. To provide an occupancy contact closure signal to an HVAC system, change the power pack to a **SWX-950-AX** model and add a **SWX-910-AR** auxiliary relay pack.

SUPPORTED CODE REQUIREMENTS

Occupancy Sensor Control
9.4.1.1 (g), 9.4.1.1 (h), & 9.4.1.2 (b)

Manual Control - Switch
9.4.1.1 (a)*


Auto On to Full Allowed
9.4.1.1 (g) & 9.4.1.1 (h)

*NOT REQUIRED FOR AREAS WITH SAFETY CONCERNS



KEY

- TO LINE VOLTAGE CONNECTIONS
- LOW VOLTAGE WIRING (18 AWG)

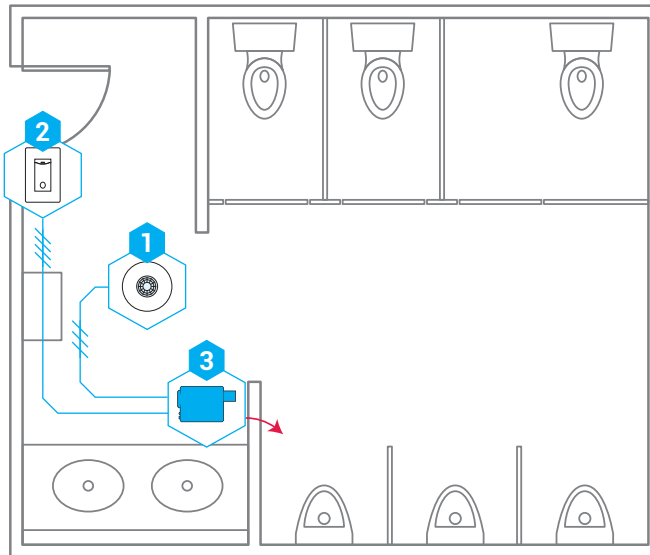

BILL OF MATERIAL

DIAGRAM #	QTY	MODEL #	DESCRIPTION
1	1	SWX-222-1	Dual Technology (PIR/Acoustic) Occupancy Sensor, Large Motion, Ceiling Mount 360°
2	1	SWX-801-xx	On/Off Wall Switch - Low Voltage, <xx = color>
3	1	SWX-900-AX	Power Pack Controller w/ Auxiliary Switch Input, 120/277 VAC

SEQUENCE OF OPERATION

- Lighting switched on automatically to full bright.
- On/off manual control of lighting.
- Lighting turns off automatically after occupants leave the space.

ADDITIONAL DESIGN CONSIDERATIONS

- Additional sensors can be added to provide coverage of entry vestibules or for wash areas.
- To provide an occupancy contact closure signal to an HVAC system, change the sensor to a **SWX-222-1-AR** model.

SUPPORTED CODE REQUIREMENTS

Occupancy Sensor Control
9.4.1.1 (g), 9.4.1.1 (h), & 9.4.1.2 (b)


Manual Control - Switch
9.4.1.1 (a)*

Auto On to Full Allowed
9.4.1.1 (g) & 9.4.1.1 (h)

*NOT REQUIRED FOR AREAS WITH SAFETY CONCERNS



WIRED

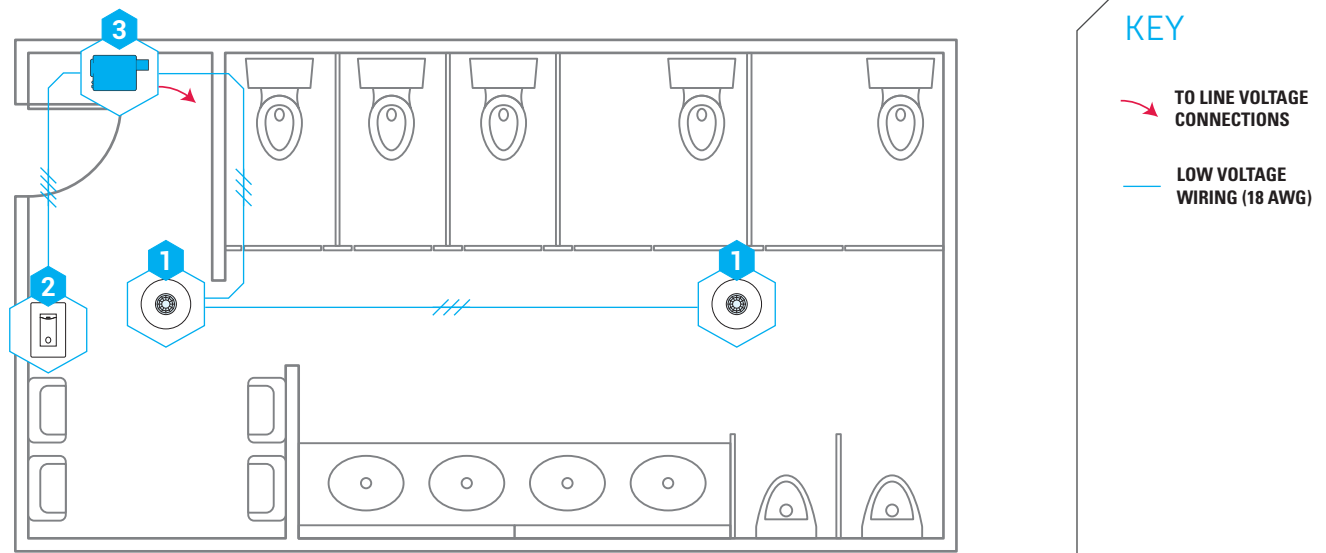

BILL OF MATERIAL

DIAGRAM #	QTY	MODEL #	DESCRIPTION
1	2	SWX-222-1	Dual Technology (PIR/Acoustic) Occupancy Sensor, Large Motion, Ceiling Mount 360°
2	1	SWX-801-xx	On/Off Wall Switch - Low Voltage, <xx = color>
3	1	SWX-900-AX	Power Pack Controller w/ Auxiliary Switch Input, 120/277 VAC

SEQUENCE OF OPERATION

1. Lighting switched on automatically to full bright.
2. On/off manual control of lighting.
3. Lighting turns off automatically after occupants leave the space.

ADDITIONAL DESIGN CONSIDERATIONS

1. To provide an occupancy contact closure signal to an HVAC system, change one of the sensors to a **SWX-222-1-AR** model.


SUPPORTED CODE REQUIREMENTS

Occupancy Sensor Control
9.4.1.1 (g), 9.4.1.1 (h), & 9.4.1.2 (b)

Manual Control - Switch
9.4.1.1 (a)*

Auto On to Full Allowed
9.4.1.1 (g) & 9.4.1.1 (h)

*NOT REQUIRED FOR AREAS WITH SAFETY CONCERNS

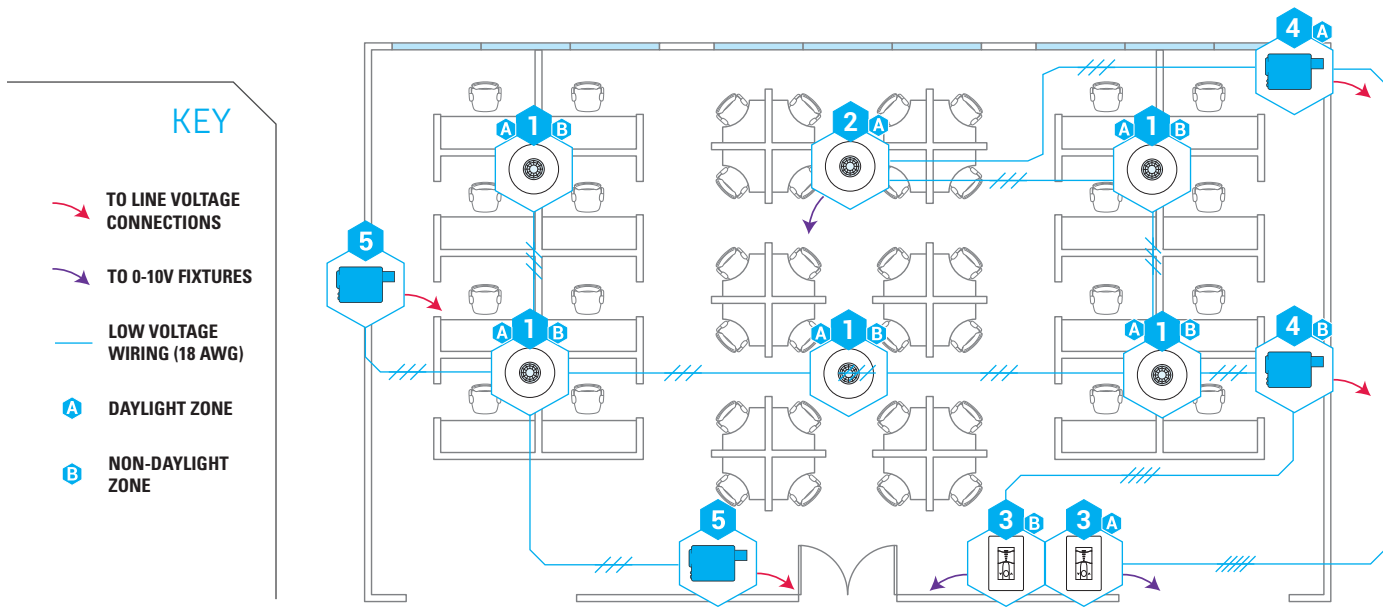

BILL OF MATERIAL

DIAGRAM #	QTY	MODEL #	DESCRIPTION
1	5	SWX-221-1	Dual Technology (PIR/Acoustic) Occupancy Sensor, Small Motion, Ceiling Mount 360°
2	1	SWX-231-1-D	Dual Technology (PIR/Acoustic) Occupancy Sensor, Small Motion, Ceiling Mount 360° w/ Integrated Daylight Harvesting (0-10V)
3	2	SWX-803-xx	Dimming Wall Station (0-10V), <xx = color>
4	2	SWX-900-AX	Power Pack w/ Auxiliary Switch Input, 120/277 VAC
5	2	SWX-900	Power Pack Controller, 120/277 VAC (For Receptacle Control)

SEQUENCE OF OPERATION

1. Lighting switched on manually to last user level or automatically to 50% upon occupancy.
2. On/off & raise/lower control of each lighting zone via separate dimmer switches.
3. Lighting in daylight zone(s) automatically dims according to daylight contribution.
4. All lighting zones turn off automatically after occupants leave the space.

ADDITIONAL DESIGN CONSIDERATIONS

1. Maximum lighting levels can be task tuned to increase energy savings.
2. Increase number of control zones by adding **SWX-900-AX** and **SWX-803-xx** units.
3. A standalone daylight harvesting sensor may also be used (model **SWX-250-1-D**) instead of combined sensor/daylight harvesting unit.
4. If Partial Off (dimming lighting to low level) is desired as an alternative to Full Off, substitute **SWX-900-AX-D2** as the power pack(s).
5. To provide an occupancy contact closure signal to an HVAC system, change one of the sensors to a **SWX-221-1-AR** model.
6. Controlled occupancy zones are limited to 600 sq. ft. or less. Once a zone is vacant for 15 minutes, the occupancy sensor automatically reduces lighting in the zone by 80% of the light output or it can turn lighting OFF in the vacant zone.

NOTE: RECEPTACLES WILL AUTOMATICALLY TURN ON UPON OCCUPIED AND TURN OFF WITH THE LIGHTS AFTER OCCUPANTS LEAVE THE SPACE

SUPPORTED CODE REQUIREMENTS

Occupancy Sensor Control
9.4.1.1 (g), 9.4.1.1 (h), & 9.4.1.2 (b)

Manual Control - Switch
9.4.1.1. (a)

Daylight Responsive Control**
9.4.1.1. (e), 9.4.1.1 (f), 9.4.1.2 (d), & 9.4.1.4 (a)

Manual On-Off/Partial Auto On
9.4.1.1 (b) & 9.4.1.1. (c)

Manual Light Reduction Control - Dimmer
9.4.1.1. (a) & 9.4.1.1 (d)*

Receptacle Controls
8.4.2


*RECOMMENDED BUT NOT REQUIRED BY CODE

**NOT REQUIRED FOR ROOMS WITH < 150W OF LIGHTING IN PRIMARY DAYLIGHT ZONE

NOTE: SECTION C405.2.1.3(1) REQUIRES THAT INDIVIDUALLY CONTROLLED ZONES BE NOT > 600 SQ. FT.



WIRED

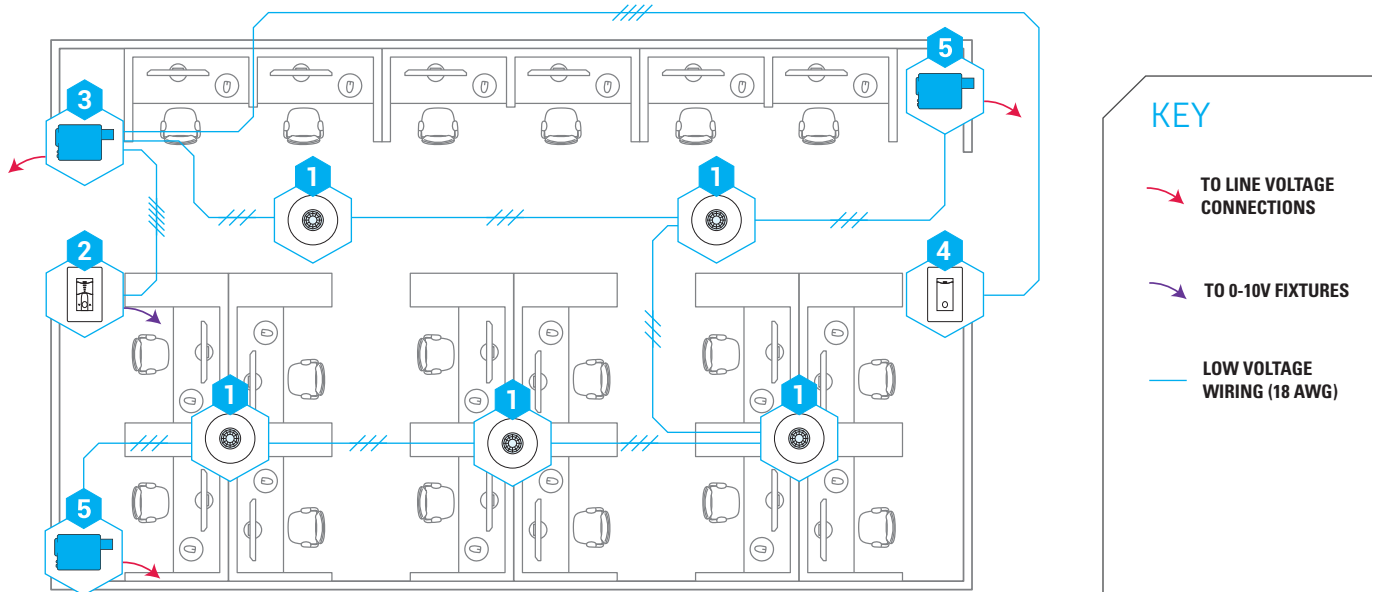

BILL OF MATERIAL

DIAGRAM #	QTY	MODEL #	DESCRIPTION
1	5	SWX-221-1	Dual Technology (PIR/Acoustic) Occupancy Sensor, Small Motion, Ceiling Mount 360°
2	1	SWX-803-xx	Dimming Wall Station (0-10V), <xx = color>
3	1	SWX-900-AX	Power Pack w/ Auxiliary Switch Input, 120/277 VAC
4	1	SWX-801-xx	On/Off Wall Station, <xx = color>
5	2	SWX-900	Power Pack Controller, 120/277 VAC (For Receptacle Control)

SEQUENCE OF OPERATION

1. Lighting switched on manually to last user level or automatically to 50% upon occupancy.
2. On/off & raise/lower control of each lighting zone via separate dimmer switches.
3. All lighting zones turn off automatically after occupants leave the space.

ADDITIONAL DESIGN CONSIDERATIONS

1. Maximum lighting levels can be task tuned to increase energy savings.
2. Increase number of control zones by adding **SWX-900-AX** and **SWX-803-xx** units.
3. If Partial Off (dimming lighting to low level) is desired as an alternative to Full Off, substitute **SWX-900-AX-D2** as the power pack(s).
4. To provide an occupancy contact closure signal to an HVAC system, change one of the sensors to a **SWX-221-1-AR** model.
5. Controlled occupancy zones are limited to 600 sq. ft. or less. Once a zone is vacant for 15 minutes, the occupancy sensor automatically reduces lighting in the zone by 80% of the light output or it can turn lighting OFF in the vacant zone.

NOTE: RECEPTACLES WILL AUTOMATICALLY TURN ON UPON OCCUPIED AND TURN OFF WITH THE LIGHTS AFTER OCCUPANTS LEAVE THE SPACE

SUPPORTED CODE REQUIREMENTS

Occupancy Sensor Control
9.4.1.1 (g), 9.4.1.1 (h), & 9.4.1.2 (b)

Manual Control - Switch
9.4.1.1. (a)

Receptacle Controls
8.4.2

Manual On-Off/Partial Auto On
9.4.1.1 (b) & 9.4.1.1. (c)

Manual Light Reduction Control - Dimmer
9.4.1.1. (a) & 9.4.1.1 (d)*


*RECOMMENDED BUT NOT REQUIRED BY CODE

NOTE: SECTION C405.2.1.3(1) REQUIRES THAT INDIVIDUALLY CONTROLLED ZONES BE NOT > 600 SQ. FT.



KEY

-  TO LINE VOLTAGE CONNECTIONS
-  TO 0-10V LIGHTING
-  WIRELESS CONNECTION
-  DAYLIGHT ZONE
-  NON-DAYLIGHT ZONE

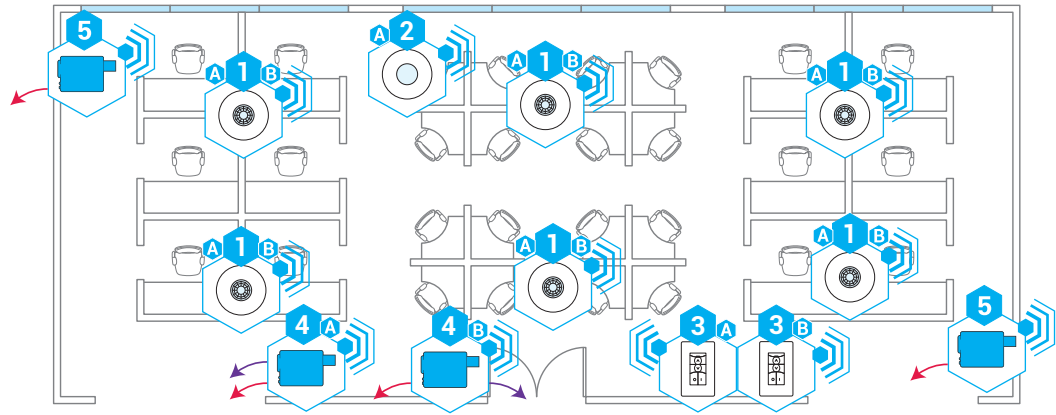

BILL OF MATERIAL

DIAGRAM #	QTY	MODEL #	DESCRIPTION
	6	SWX-221-B	Wireless Dual Technology (PIR/Acoustic) Occupancy Sensor, Small Motion, Ceiling Mount 360°
	1	SWX-250-B	Wireless Daylight Harvesting Photocell
	2	SWX-854-B-xx	Wireless Remote Dimming Wall Station, <xx = color>
	2	SWX-950-D2	Wireless Power Pack w/ Dimming (0-10V), 120/277 VAC
	2	SWX-950	Power Pack Controller, 120/277 VAC (For Receptacle Control)

SEQUENCE OF OPERATION

1. Lighting switched on manually to last user level or automatically to 50% upon occupancy.
2. On/off & raise/lower control of each lighting zone via separate dimmer switches.
3. Lighting in daylight zone(s) automatically dims according to daylight contribution.
4. All lighting zones turn off automatically after occupants leave the space.

ADDITIONAL DESIGN CONSIDERATIONS

1. Maximum lighting levels can be task tuned to increase energy savings.
2. Increase number of control zones by adding **SWX-950-D2** and **SWX-854-B-xx** units.
3. To provide an occupancy contact closure signal to an HVAC system, change one of the power packs to a **SWX-950-AX-D2** model and add a **SWX-910-AR** auxiliary relay pack.
4. Controlled occupancy zones are limited to 600 sq. ft. or less. Once a zone is vacant for 15 minutes, the occupancy sensor automatically reduces lighting in the zone by 80% of the light output or it can turn lighting OFF in the vacant zone.

NOTE: RECEPTACLES WILL AUTOMATICALLY TURN ON UPON OCCUPIED AND TURN OFF WITH THE LIGHTS AFTER OCCUPANTS LEAVE THE SPACE

SUPPORTED CODE REQUIREMENTS

Occupancy Sensor Control
9.4.1.1 (g), 9.4.1.1 (h), & 9.4.1.2 (b)

Manual Control - Switch
9.4.1.1 (a)

Daylight Responsive Control**
9.4.1.1 (e), 9.4.1.1 (f), 9.4.1.2 (d), & 9.4.1.4 (a)

Manual On-Off/Partial Auto On
9.4.1.1 (b) & 9.4.1.1 (c)

Manual Light Reduction Control - Dimmer
9.4.1.1 (a) & 9.4.1.1 (d)*

Receptacle Controls
8.4.2


*RECOMMENDED BUT NOT REQUIRED BY CODE

**NOT REQUIRED FOR ROOMS WITH < 150W OF LIGHTING IN PRIMARY DAYLIGHT ZONE

NOTE: SECTION C405.2.1.3(1) REQUIRES THAT INDIVIDUALLY CONTROLLED ZONES BE NOT > 600 SQ. FT.



WIRELESS

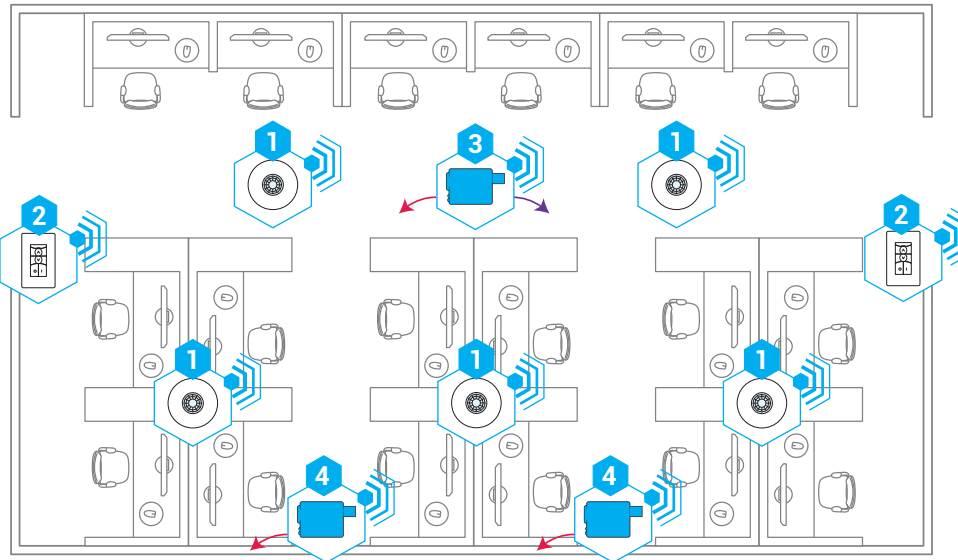

KEY

- TO LINE VOLTAGE CONNECTIONS
- TO 0-10V LIGHTING
- ⬢ WIRELESS CONNECTION

BILL OF MATERIAL

DIAGRAM #	QTY	MODEL #	DESCRIPTION
1	5	SWX-221-B	Wireless Dual Technology (PIR/Acoustic) Occupancy Sensor, Small Motion, Ceiling Mount 360°
2	2	SWX-854-B-xx	Wireless Remote Dimming Wall Station (0-10V), <xx = color>
3	1	SWX-950-D2	Wireless Power Pack w/ Dimming (0-10V), 120/277 VAC
4	2	SWX-950	Power Pack Controller, 120/277 VAC (For Receptacle Control)

SEQUENCE OF OPERATION

- Lighting switched on manually to last user level or automatically to 50% upon occupancy.
- On/off & raise/lower control of each lighting zone via separate dimmer switches.
- All lighting zones turn off automatically after occupants leave the space.

ADDITIONAL DESIGN CONSIDERATIONS

- Maximum lighting levels can be task tuned to increase energy savings.
- Increase number of control zones by adding **SWX-950-D2** and **SWX-854-B-xx** units.
- To provide an occupancy contact closure signal to an HVAC system, change the power pack to a **SWX-950-AX-D2** model and add a **SWX-910-AR** auxiliary relay pack.
- Controlled occupancy zones are limited to 600 sq. ft. or less. Once a zone is vacant for 15 minutes, the occupancy sensor automatically reduces lighting in the zone by 80% of the light output or it can turn lighting OFF in the vacant zone.

NOTE: RECEPTACLES WILL AUTOMATICALLY TURN ON UPON OCCUPIED AND TURN OFF WITH THE LIGHTS AFTER OCCUPANTS LEAVE THE SPACE

SUPPORTED CODE REQUIREMENTS

Occupancy Sensor Control
9.4.1.1 (g), 9.4.1.1 (h), & 9.4.1.2 (b)

Manual Control - Switch
9.4.1.1 (a)

Receptacle Controls
8.4.2

Manual On-Off/Partial Auto On
9.4.1.1 (b) & 9.4.1.1 (c)

Manual Light Reduction Control - Dimmer
9.4.1.1 (a) & 9.4.1.1 (d)*


*RECOMMENDED BUT NOT REQUIRED BY CODE

NOTE: SECTION C405.2.1.3(1) REQUIRES THAT INDIVIDUALLY CONTROLLED ZONES BE NOT > 600 SQ. FT.



KEY

- TO LINE VOLTAGE CONNECTIONS
- TO 0-10V LIGHTING
- LOW VOLTAGE WIRING (18 AWG)
- A** DAYLIGHT ZONE
- B** NON-DAYLIGHT ZONE

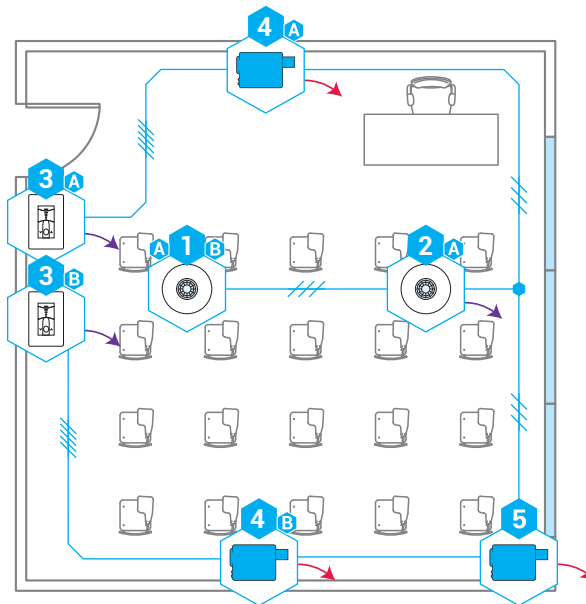

BILL OF MATERIAL

DIAGRAM #	QTY	MODEL #	DESCRIPTION
1	1	SWX-221-1	Dual Technology (PIR/Acoustic) Occupancy Sensor, Small Motion, Ceiling Mount 360°
2	1	SWX-231-1-D	Dual Technology (PIR/Acoustic) Occupancy Sensor, Small Motion, Ceiling Mount 360° w/ Daylight Harvesting (0-10V)
3	2	SWX-803-xx	Dimming Wall Station (0-10V), <xx = color>
4	2	SWX-900-AX	Power Pack w/ Auxiliary Switch Input, 120/277 VAC
5	1	SWX-900	Power Pack Controller, 120/277 VAC (For Receptacle Control)

SEQUENCE OF OPERATION

- Lighting switched on manually to last user level or automatically to 50% upon occupancy.
- On/off & raise/lower control of each lighting zone via separate dimmer switches.
- Lighting in daylight zone(s) automatically dims according to daylight contribution.
- All lighting zones turn off automatically after occupants leave the space.

NOTE: RECEPTACLES WILL AUTOMATICALLY TURN ON UPON OCCUPIED AND TURN OFF WITH THE LIGHTS AFTER OCCUPANTS LEAVE THE SPACE

ADDITIONAL DESIGN CONSIDERATIONS

- Alternative corner mount sensor model **SWX-421-1** (see wired option 2)
- Increase number of control zones by adding **SWX-900-AX** and **SWX-803-xx** units.
- Maximum lighting level can be task tuned to increase energy savings.
- To provide an occupancy contact closure signal to an HVAC system, change the sensor to a **SWX-221-1-AR** model.

SUPPORTED CODE REQUIREMENTS

Occupancy Sensor Control
9.4.1.1 (g), 9.4.1.1 (h), & 9.4.1.2 (b)

Manual Control - Switch
9.4.1.1 (a)

Daylight Responsive Control**
9.4.1.1. (e), 9.4.1.1 (f), 9.4.1.2 (d), & 9.4.1.4 (a)


Manual On-Off/Partial Auto On
9.4.1.1 (b) & 9.4.1.1 (c)

Manual Light Reduction Control - Dimmer
9.4.1.1 (a) & 9.4.1.1 (d)*

Receptacle Controls
8.4.2

*RECOMMENDED BUT NOT REQUIRED BY CODE

**NOT REQUIRED FOR ROOMS WITH < 150W OF LIGHTING IN PRIMARY DAYLIGHT ZONE

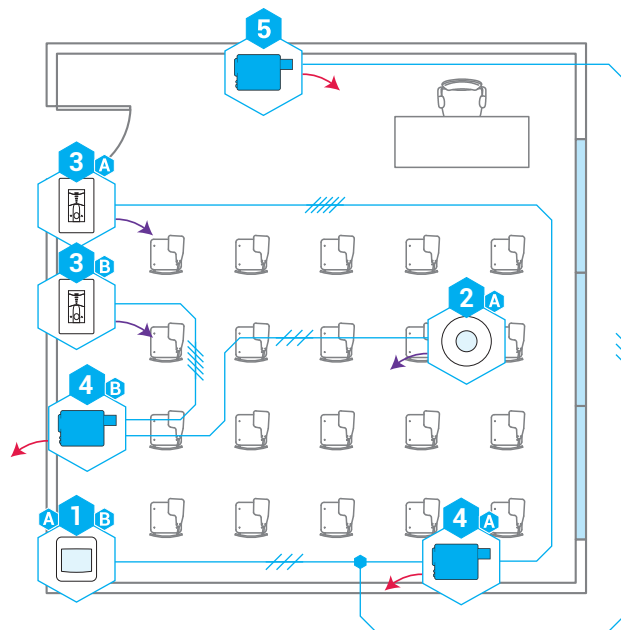

KEY

- TO LINE VOLTAGE CONNECTIONS
- TO 0-10V LIGHTING
- LOW VOLTAGE WIRING (18 AWG)
- A DAYLIGHT ZONE
- B NON-DAYLIGHT ZONE

BILL OF MATERIAL

DIAGRAM #	QTY	MODEL #	DESCRIPTION
1	1	SWX-421-1	Dual Technology (PIR/Acoustic) Occupancy Sensor, Wide View Corner Mount
2	1	SWX-250-1-D	Daylight Harvesting Photocell (0-10V)
3	2	SWX-803-xx	Dimming Wall Station (0-10V), <xx = color>
4	2	SWX-900-AX	Power Pack w/ Auxiliary Switch Input, 120/277 VAC
5	1	SWX-900	Power Pack Controller, 120/277 VAC (For Receptacle Control)

SEQUENCE OF OPERATION

- Lighting switched on manually to last user level or automatically to 50% upon occupancy.
- On/off & raise/lower control of each lighting zone via separate dimmer switches.
- Lighting in daylight zone(s) automatically dims according to daylight contribution.
- All lighting zones turn off automatically after occupants leave the space.

ADDITIONAL DESIGN CONSIDERATIONS

- Increase number of control zones by adding **SWX-900-AX** and **SWX-803-xx** units.
- Maximum lighting level can be task tuned to increase energy savings.
- For added occupancy coverage, change daylight harvesting sensor to combination occupancy & daylight harvesting sensor (model **SWX-231-1-D**) or add a second corner mount sensor.
- To provide an occupancy contact closure signal to an HVAC system, change the sensor to an **SWX-421-1-AR** model.

NOTE: RECEPTACLES WILL AUTOMATICALLY TURN ON UPON OCCUPIED AND TURN OFF WITH THE LIGHTS AFTER OCCUPANTS LEAVE THE SPACE

SUPPORTED CODE REQUIREMENTS

Occupancy Sensor Control
9.4.1.1 (g), 9.4.1.1 (h), & 9.4.1.2 (b)

Manual Control - Switch
9.4.1.1 (a)

Daylight Responsive Control**
9.4.1.1 (e), 9.4.1.1 (f), 9.4.1.2 (d), & 9.4.1.4 (a)

Manual On-Off/Partial Auto On
9.4.1.1 (b) & 9.4.1.1 (c)

Manual Light Reduction Control - Dimmer
9.4.1.1 (a) & 9.4.1.1 (d)*

Receptacle Controls
8.4.2


*RECOMMENDED BUT NOT REQUIRED BY CODE

**NOT REQUIRED FOR ROOMS WITH < 150W OF LIGHTING IN PRIMARY DAYLIGHT ZONE



KEY

-  TO LINE VOLTAGE CONNECTIONS
-  TO 0-10V LIGHTING
-  WIRELESS CONNECTION
-  DAYLIGHT ZONE
-  NON-DAYLIGHT ZONE

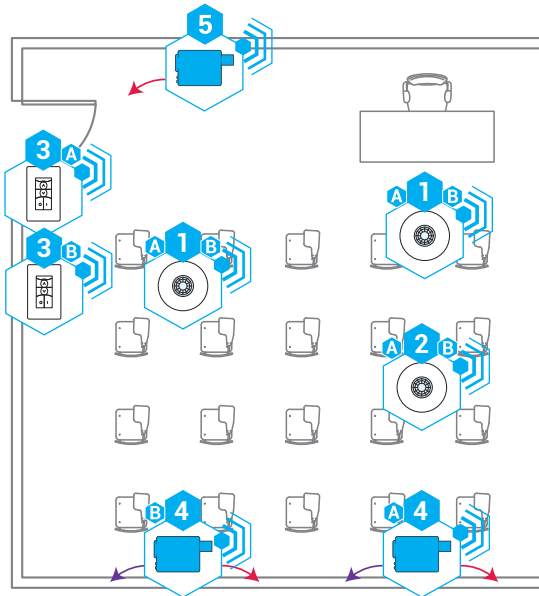

BILL OF MATERIAL

DIAGRAM #	QTY	MODEL #	DESCRIPTION
	2	SWX-221-B	Wireless Dual Technology (PIR/Acoustic) Occupancy Sensor, Small Motion, Ceiling Mount 360°
	1	SWX-250-B	Wireless Daylight Harvesting Photocell
	2	SWX-854-B-xx	Wireless Remote Dimming Wall Station (0-10V), <xx = color>
	2	SWX-950-D2	Wireless Power Pack w/ Dimming (0-10V), 120/277 VAC
	1	SWX-950	Power Pack Controller, 120/277 VAC (For Receptacle Control)

SEQUENCE OF OPERATION

- Lighting switched on manually to last user level or automatically to 50% upon occupancy.
- On/off & raise/lower control of each lighting zone via separate dimmer switches.
- Lighting in daylight zone(s) automatically dims according to daylight contribution.
- All lighting zones turn off automatically after occupants leave the space.

NOTE: RECEPTACLES WILL AUTOMATICALLY TURN ON UPON OCCUPIED AND TURN OFF WITH THE LIGHTS AFTER OCCUPANTS LEAVE THE SPACE

ADDITIONAL DESIGN CONSIDERATIONS

- Alternative corner mount sensor model **SWX-421-B** (see wireless option 2).
- Increase number of control zones by adding **SWX-950-D** and **SWX-854-B-xx** units.
- Maximum lighting level can be task tuned to increase energy savings.
- To provide an occupancy contact closure signal to an HVAC system, change the power pack to a **SWX-950-AX-D2** model and add a **SWX-910-AR** auxiliary relay pack.

SUPPORTED CODE REQUIREMENTS

Occupancy Sensor Control
9.4.1.1 (g), 9.4.1.1 (h), & 9.4.1.2 (b)

Manual Control - Switch
9.4.1.1 (a)

Daylight Responsive Control**
9.4.1.1 (e), 9.4.1.1 (f), 9.4.1.2 (d), & 9.4.1.4 (a)


Manual On-Off/Partial Auto On
9.4.1.1 (b) & 9.4.1.1 (c)

Manual Light Reduction Control - Dimmer
9.4.1.1 (a) & 9.4.1.1 (d)*

Receptacle Controls
8.4.2

*RECOMMENDED BUT NOT REQUIRED BY CODE

**NOT REQUIRED FOR ROOMS WITH < 150W OF LIGHTING IN PRIMARY DAYLIGHT ZONE

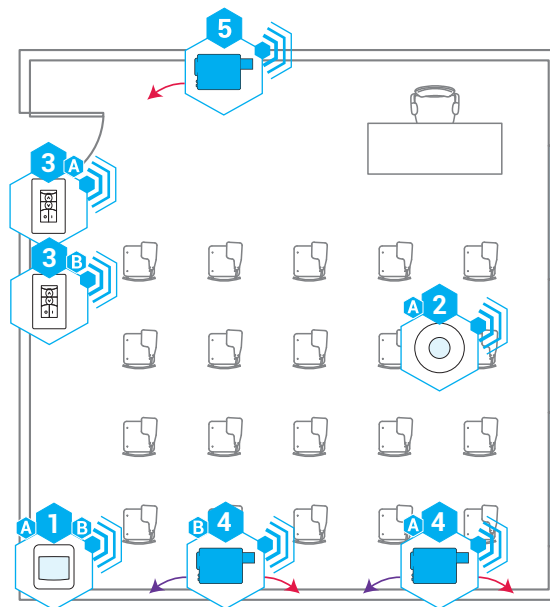

KEY

- TO LINE VOLTAGE CONNECTIONS
- TO 0-10V LIGHTING
- WIRELESS CONNECTION
- DAYLIGHT ZONE
- NON-DAYLIGHT ZONE

BILL OF MATERIAL

DIAGRAM #	QTY	MODEL #	DESCRIPTION
	1	SWX-421-B	Wireless Dual Technology (PIR/Acoustic) Occupancy Sensor, Wide View Corner Mount
	1	SWX-250-B	Wireless Daylight Harvesting Photocell
	2	SWX-854-B-xx	Wireless Remote Dimming Wall Station, <xx = color>
	2	SWX-950-D2	Wireless Power Pack w/ Dimming (0-10V), 120/277 VAC
	1	SWX-950	Power Pack Controller, 120/277 VAC (For Receptacle Control)

SEQUENCE OF OPERATION

- Lighting switched on manually to last user level or automatically to 50% upon occupancy.
- On/off & raise/lower control of each lighting zone via separate dimmer switches.
- Lighting in daylight zone(s) automatically dims according to daylight contribution.
- All lighting zones turn off automatically after occupants leave the space.

NOTE: RECEPTACLES WILL AUTOMATICALLY TURN ON UPON OCCUPIED AND TURN OFF WITH THE LIGHTS AFTER OCCUPANTS LEAVE THE SPACE

ADDITIONAL DESIGN CONSIDERATIONS

- Increase number of control zones by adding **SWX-950-D** and **SWX-854-B-xx** units.
- Maximum lighting level can be task tuned to increase energy savings.
- For enhanced occupancy coverage, add a second corner mount sensor in adjacent corner.
- To provide an occupancy contact closure signal to an HVAC system, change the power pack to a **SWX-950-AX-D2** model and add a **SWX-910-AR** auxiliary relay pack.

SUPPORTED CODE REQUIREMENTS

Occupancy Sensor Control
9.4.1.1 (g), 9.4.1.1 (h), & 9.4.1.2 (b)

Manual On-Off/Partial Auto On
9.4.1.1 (b) & 9.4.1.1 (c)

Manual Control - Switch
9.4.1.1 (a)

Manual Light Reduction Control - Dimmer
9.4.1.1 (a) & 9.4.1.1 (d)*

Daylight Responsive Control**
9.4.1.1 (e), 9.4.1.1 (f), 9.4.1.2 (d), & 9.4.1.4 (a)

Receptacle Controls
8.4.2


*RECOMMENDED BUT NOT REQUIRED BY CODE

**NOT REQUIRED FOR ROOMS WITH < 150W OF LIGHTING IN PRIMARY DAYLIGHT ZONE



KEY

-  TO LINE VOLTAGE CONNECTIONS
-  TO 0-10V LIGHTING

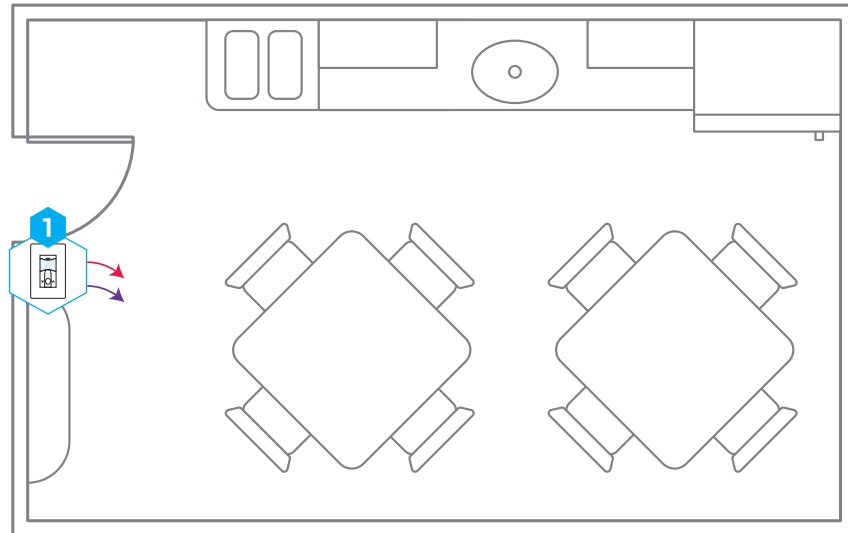

BILL OF MATERIAL

DIAGRAM #	QTY	MODEL #	DESCRIPTION
	1	SWX-121-D-xx	Dual Technology (PIR/Acoustic) Wall Switch Occupancy Sensor w/ Dimming (0-10V), 120/277 VAC, , <xx = color>

SEQUENCE OF OPERATION

1. Lighting switched on manually to last user level or automatically to 50% upon occupancy.
2. On/off & raise/lower control of lighting via dimmer switch.
3. Lighting turns off automatically after occupants leave the space.

ADDITIONAL DESIGN CONSIDERATIONS

1. For a compliant non-dimming solution, use a **SWX-101-xx**.
2. Maximum lighting level can be task tuned to increase energy savings.
3. Although not required by code, receptacle control can be achieved by adding a **SWX-900** power pack wired on the load side of the wall switch sensor.

SUPPORTED CODE REQUIREMENTS

Occupancy Sensor Control
9.4.1.1 (g), 9.4.1.1 (h), & 9.4.1.2 (b)

Manual Control - Switch
9.4.1.1 (a)


Manual On-Off/Partial Auto On
9.4.1.1 (b) & 9.4.1.1 (c)

Manual Light Reduction Control - Dimmer
9.4.1.1 (a) & 9.4.1.1 (d)*

*RECOMMENDED BUT NOT REQUIRED BY CODE



WIRED

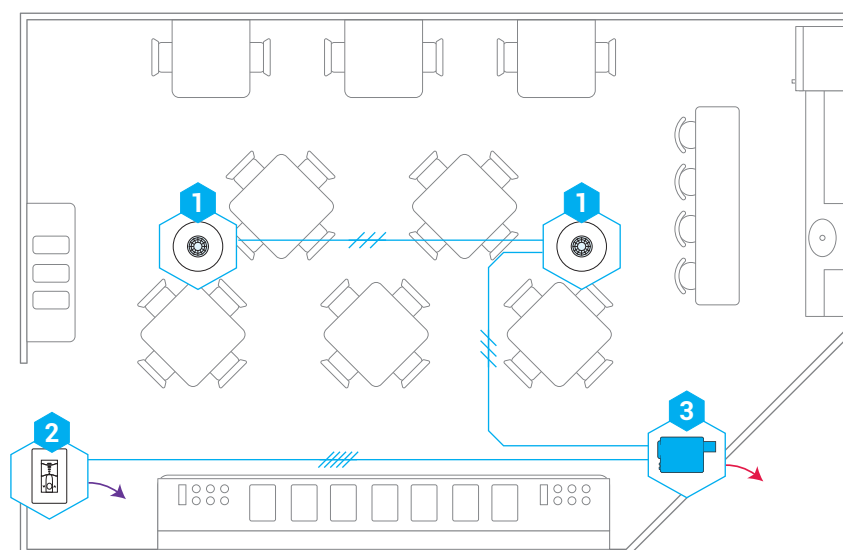

KEY

- TO LINE VOLTAGE CONNECTIONS
- TO 0-10V LIGHTING
- LOW VOLTAGE WIRING (18 AWG)

BILL OF MATERIAL

DIAGRAM #	QTY	MODEL #	DESCRIPTION
1	2	SWX-221-1	Dual Technology (PIR/Acoustic) Occupancy Sensor, Small Motion, Ceiling Mount 360°
2	1	SWX-803-xx	Dimming Wall Station (0-10V), <xx = color>
3	1	SWX-900-AX	Power Pack w/ Auxiliary Switch Input, 120/277 VAC

SEQUENCE OF OPERATION

- Lighting switched on manually to last user level or automatically to 50% upon occupancy.
- On/off & raise/lower control of lighting via dimmer switch.
- Lighting turns off automatically after occupants leave the space.

ADDITIONAL DESIGN CONSIDERATIONS

- Alternative corner mount sensor model **SWX-421-1**.
- Maximum lighting level can be task tuned to increase energy savings.
- If room has >150W of lighting in a daylight zone, add daylight harvesting photocell (model **SWX-250-1-D**).
- For a compliant non-dimming solution, use a **SWX-801-xx** instead of the **SWX-803-xx**.
- To provide an occupancy contact closure signal to an HVAC system, change one sensor to a **SWX-221-1-AR** model.
- Although not required by code, receptacle control can be achieved by connecting an additional power pack.

SUPPORTED CODE REQUIREMENTS

Occupancy Sensor Control
9.4.1.1 (g), 9.4.1.1 (h), & 9.4.1.2 (b)

Manual On-Off/Partial Auto On
9.4.1.1 (b) & 9.4.1.1 (c)

Manual Control - Switch
9.4.1.1 (a)


Manual Light Reduction Control - Dimmer
9.4.1.1 (a) & 9.4.1.1 (d)*

*RECOMMENDED BUT NOT REQUIRED BY CODE



KEY

- TO LINE VOLTAGE CONNECTIONS
- LOW VOLTAGE WIRING (18 AWG)

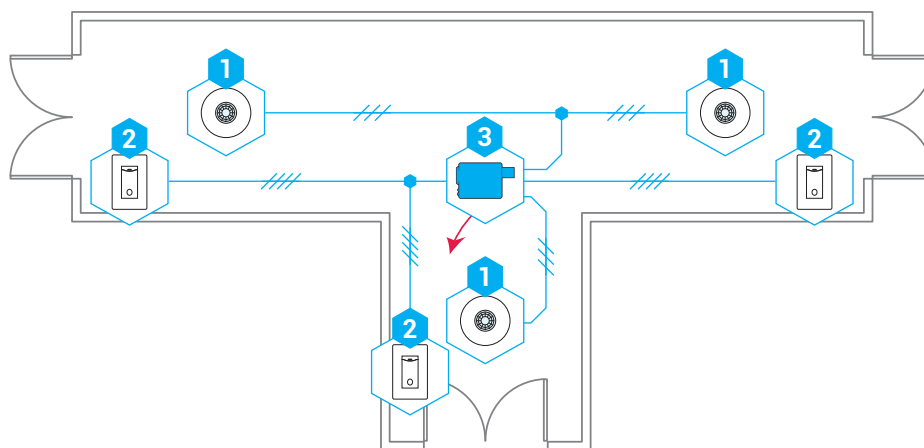

BILL OF MATERIAL

DIAGRAM #	QTY	MODEL #	DESCRIPTION
1	3	SWX-202-1	PIR Occupancy Sensor, Large Motion, Ceiling Mount 360°
2	3	SWX-801-xx	On/Off Wall Switch - Low Voltage, <xx = color>
3	1	SWX-900-AX	Power Pack w/ Auxiliary Switch Input, 120/277 VAC

SEQUENCE OF OPERATION

- Lighting switched on automatically to full bright.
- On/off manual control of lighting.
- Lighting turns off automatically after occupants leave the space.

ADDITIONAL DESIGN CONSIDERATIONS


- In long corridors, add additional ceiling sensors every 40 ft as needed.
- Alternative hallway sensor (at ends of corridor) model **SWX-402-1**.
- To provide an occupancy contact closure signal to an HVAC system, change one sensor to a **SWX-202-1-AR** model.

SUPPORTED CODE REQUIREMENTS

Occupancy Sensor Control
9.4.1.1 (g), 9.4.1.1 (h), & 9.4.1.2 (b)

Manual Control - Switch
9.4.1.1 (a)

Auto On to Full Allowed
9.4.1.1 (h)

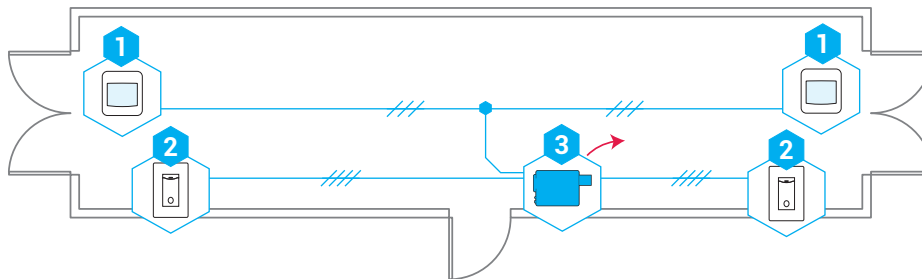

KEY

- TO LINE VOLTAGE CONNECTIONS
- LOW VOLTAGE WIRING (18 AWG)

BILL OF MATERIAL

DIAGRAM #	QTY	MODEL #	DESCRIPTION
1	2	SWX-402-1	PIR Occupancy Sensor, Hallway Coverage
2	2	SWX-801-xx	On/Off Wall Switch - Low Voltage, <xx = color>
3	1	SWX-900-AX	Power Pack w/ Auxiliary Switch Input, 120/277 VAC

SEQUENCE OF OPERATION

1. Lighting switched on automatically to full bright.
2. On/off manual control of lighting.
3. Lighting turns off automatically after occupants leave the space.

ADDITIONAL DESIGN CONSIDERATIONS

1. In corridors over 100 ft, add additional ceiling sensors in middle as needed.
2. To provide an occupancy contact closure signal to an HVAC system, change one sensor to a **SWX-402-1-AR** model.

SUPPORTED CODE REQUIREMENTS

Occupancy Sensor Control
9.4.1.1 (g), 9.4.1.1 (h), & 9.4.1.2 (b)


Manual Control - Switch
9.4.1.1 (a)

Auto On to Full Allowed
9.4.1.1 (h)



KEY

- TO LINE VOLTAGE CONNECTIONS
- TO 0-10V LIGHTING
- LOW VOLTAGE WIRING (18 AWG)

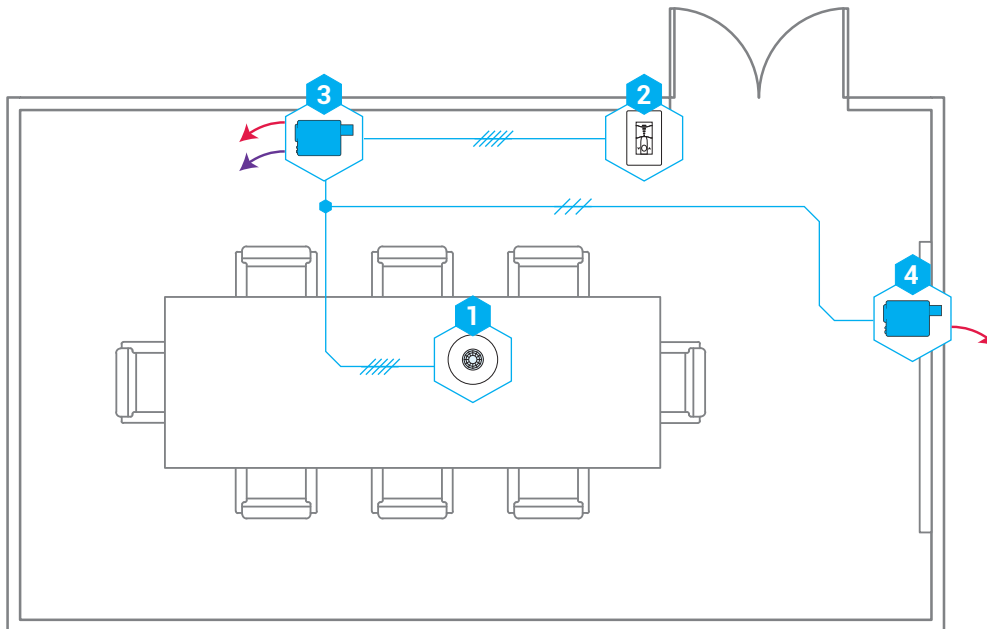

BILL OF MATERIAL

DIAGRAM #	QTY	MODEL #	DESCRIPTION
1	1	SWX-221-1	Dual Technology Occupancy Sensor, Small Motion, Ceiling Mount 360°
2	1	SWX-803-xx	Dimming Wall Station, <xx = color>
3	1	SWX-900-AX	Power Pack w/ Auxiliary Switch Input, 120/277 VAC
4	1	SWX-900	Power Pack Controller, 120/277 VAC (For Receptacle Control)

SEQUENCE OF OPERATION

- Lighting turns on automatically to 50% upon occupancy.
- On/off & raise/lower control of lighting via dimmer switch.
- Lighting turns off automatically after occupants leave the space.

ADDITIONAL DESIGN CONSIDERATIONS

- Alternative corner mount sensor model **SWX-421-1**.
- Maximum lighting level can be task tuned to increase energy savings.
- To provide an occupancy contact closure signal to an HVAC system, change the sensor to a **SWX-221-1-AR** model.

NOTE: RECEPTACLES WILL AUTOMATICALLY TURN ON UPON OCCUPIED AND TURN OFF WITH THE LIGHTS AFTER OCCUPANTS LEAVE THE SPACE

SUPPORTED CODE REQUIREMENTS

Occupancy Sensor Control
9.4.1.1 (g), 9.4.1.1 (h), & 9.4.1.2 (b)

Manual Control - Switch
9.4.1.1 (a)

Receptacle Controls
8.4.2


Manual On-Off/Partial Auto On
9.4.1.1 (b) & 9.4.1.1 (c)

Manual Light Reduction Control - Dimmer
9.4.1.1 (a) & 9.4.1.1 (d)*

*RECOMMENDED BUT NOT REQUIRED BY CODE



WIRELESS

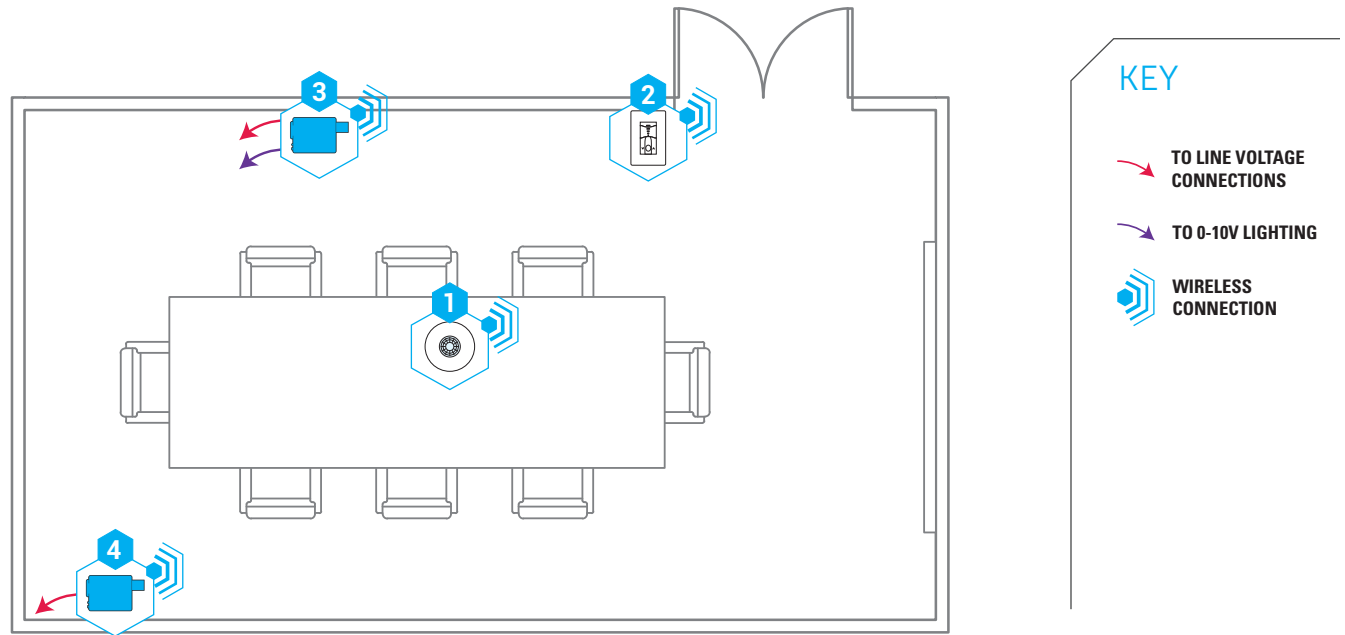

BILL OF MATERIAL

DIAGRAM #	QTY	MODEL #	DESCRIPTION
1	1	SWX-221-B	Wireless Dual Technology (PIR/Acoustic) Occupancy Sensor, Small Motion, Ceiling Mount 360°
2	1	SWX-854-B-xx	Wireless Remote Dimming Wall Station, <xx = color>
3	1	SWX-950-D2	Wireless Power Pack w/ Dimming (0-10V), 120/277 VAC
4	1	SWX-950	Power Pack Controller, 120/277 VAC (For Receptacle Control)

SEQUENCE OF OPERATION

- Lighting turns on automatically to 50% upon occupancy.
- On/off & raise/lower control of lighting via dimmer switch.
- Lighting turns off automatically after occupants leave the space.

ADDITIONAL DESIGN CONSIDERATIONS

- Alternative corner mount sensor model **SWX-421-B**.
- Maximum lighting level can be task tuned to increase energy savings.
- To provide an occupancy contact closure signal to an HVAC system, change the power pack to a **SWX-950-AX-D2** model and add a **SWX-910-AR** auxiliary relay pack.

NOTE: RECEPTACLES WILL AUTOMATICALLY TURN ON UPON OCCUPIED AND TURN OFF WITH THE LIGHTS AFTER OCCUPANTS LEAVE THE SPACE

SUPPORTED CODE REQUIREMENTS

Occupancy Sensor Control
9.4.1.1 (g), 9.4.1.1 (h), & 9.4.1.2 (b)

Manual Control - Switch
9.4.1.1 (a)

Receptacle Controls
8.4.2

Manual On-Off/Partial Auto On
9.4.1.1 (b) & 9.4.1.1 (c)


Manual Light Reduction Control - Dimmer
9.4.1.1 (a) & 9.4.1.1 (d)*

*RECOMMENDED BUT NOT REQUIRED BY CODE



KEY

- TO LINE VOLTAGE CONNECTIONS
- LOW VOLTAGE WIRING (18 AWG)

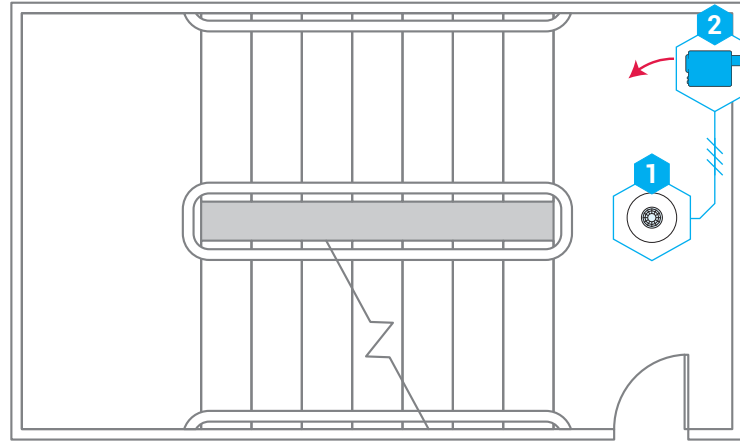

BILL OF MATERIAL

DIAGRAM #	QTY	MODEL #	DESCRIPTION
1	1	SWX-202-1	Dual Technology Occupancy Sensor, Large Motion, Ceiling Mount 360°
2	1	SWX-900-AX-D2	Power Pack, 120/277 VAC, w/ Partial Off (0-10V) Control

SEQUENCE OF OPERATION

- Lighting switched on automatically to full bright.
- Lighting drops to low level automatically after occupants leave the space.

ADDITIONAL DESIGN CONSIDERATIONS

- Control multiple levels together by adding a sensor on every entry landing controlled by the same lighting circuit (i.e. common power pack).
- Line voltage ceiling sensors (model **SWX-202-2**) or fixture mount sensors (model **SWX-501**) could also be used instead of low voltage sensor and power pack (see facing page).


SUPPORTED CODE REQUIREMENTS

Occupancy Sensor Control
9.4.1.1 (g), 9.4.1.1 (h), & 9.4.1.2 (b)

Manual Control - Switch
9.4.1.1 (a)*

Auto On to Full Allowed
9.4.1.1 (h)

*NOT REQUIRED FOR AREAS WITH SAFETY CONCERNS

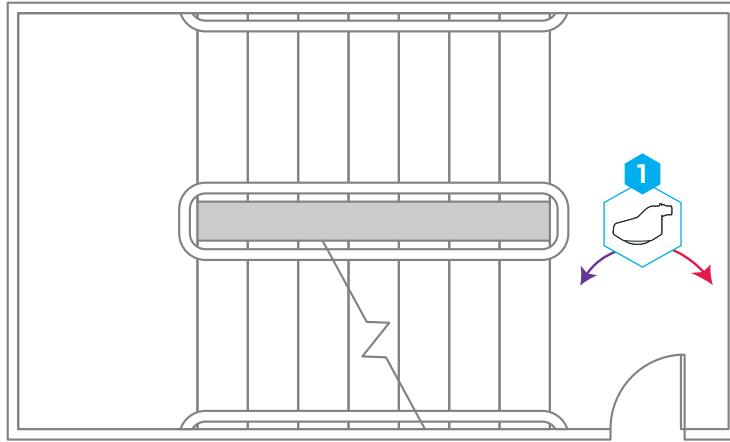

KEY

- TO LINE VOLTAGE CONNECTIONS
- TO 0-10V LIGHTING

BILL OF MATERIAL

DIAGRAM #	QTY	MODEL #	DESCRIPTION
1	1	SWX-501-HL	Fixture Mount Sensor w/ Partial Off (0-10V) Control, 120/277 VAC

SEQUENCE OF OPERATION

1. Lighting switched on automatically to full bright.
2. Lighting drops to low level automatically after occupants leave the space.

ADDITIONAL DESIGN CONSIDERATIONS

1. Alternative ceiling mount sensor model **SWX-202-2-D**.

SUPPORTED CODE REQUIREMENTS

Occupancy Sensor Control
9.4.1.1 (g), 9.4.1.1 (h), & 9.4.1.2 (b)

Manual Control - Switch
9.4.1.1 (a)*


Auto On to Full Allowed
9.4.1.1 (h)

*NOT REQUIRED FOR AREAS WITH SAFETY CONCERNS



KEY

- TO LINE VOLTAGE CONNECTIONS
- TO 0-10V LIGHTING
- LOW VOLTAGE WIRING (18 AWG)

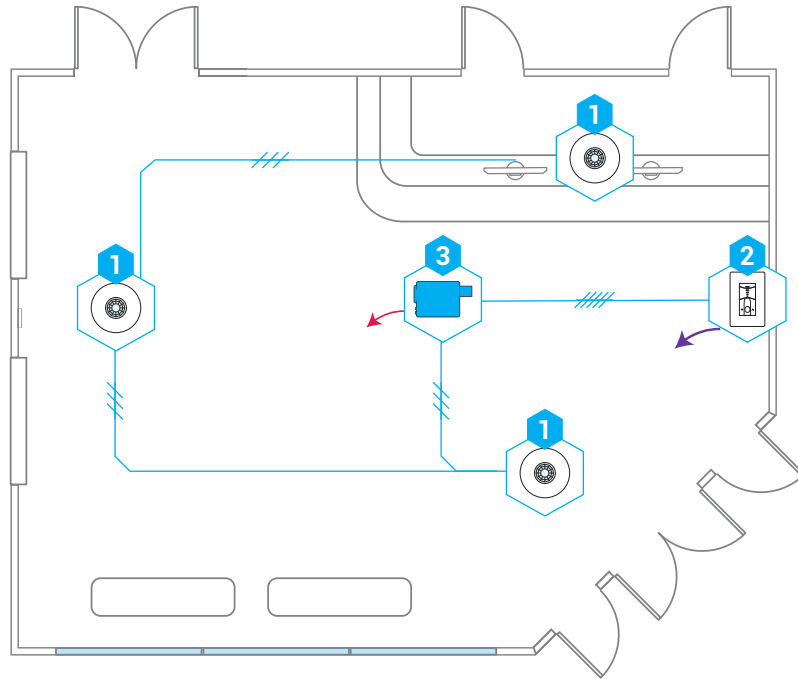

BILL OF MATERIAL

DIAGRAM #	QTY	MODEL #	DESCRIPTION
1	2	SWX-221-1	Dual Technology Occupancy Sensor, Small Motion, Ceiling Mount 360°
2	1	SWX-803-xx	Dimming Wall Station, <xx = color>
3	1	SWX-900-AX	Power Pack w/ Auxiliary Switch Input, 120/277 VAC

SEQUENCE OF OPERATION

- Lighting switched on automatically to full bright.
- On/off & raise/lower control of lighting via dimmer switch.
- Lighting turns off automatically after occupants leave the space.

ADDITIONAL DESIGN CONSIDERATIONS

- If no reception or chairs are present, PIR only sensor is adequate, model **SWX-202-1**
- Maximum lighting level can be task tuned to increase energy savings.
- If space has > 150W of lighting in a daylight zone, add daylight harvesting photocell (model **SWX-250-1-D**) or change one occupancy sensor to model **SWX-231-1-D**.
- To provide an occupancy contact closure signal to an HVAC system, change one sensor to a **SWX-221-1-AR** model.
- Although not required by code, receptacle control can be achieved by connecting an additional power pack.

SUPPORTED CODE REQUIREMENTS


Occupancy Sensor Control
9.4.1.1 (g), 9.4.1.1 (h), & 9.4.1.2 (b)

Manual Control - Switch
9.4.1.1 (a)

Auto On to Full Allowed
9.4.1.1 (h)

Manual Light Reduction Control - Dimmer
9.4.1.1 (a) & 9.4.1.1 (d)*

*RECOMMENDED BUT NOT REQUIRED BY CODE.

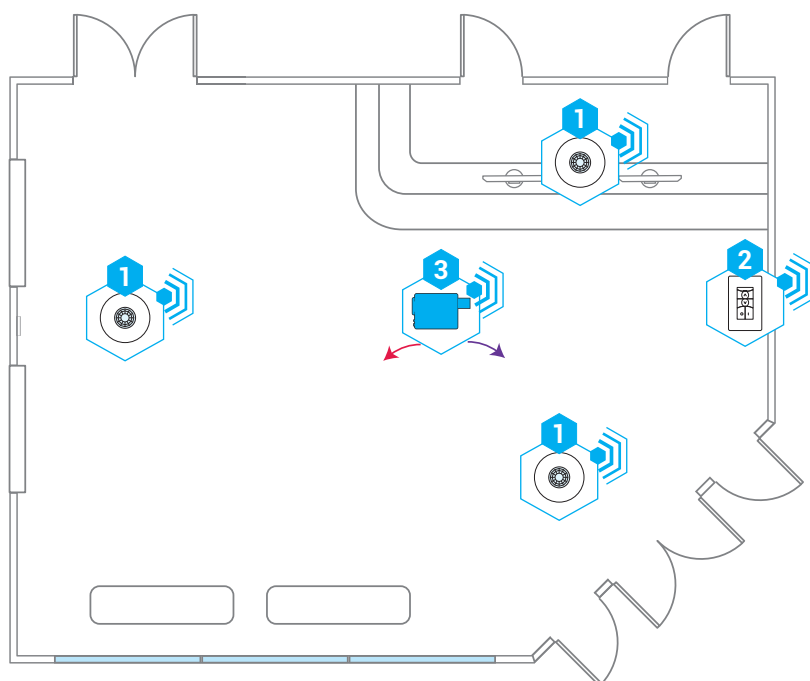

KEY

-  TO LINE VOLTAGE CONNECTIONS
-  TO 0-10V LIGHTING
-  WIRELESS CONNECTION

BILL OF MATERIAL

DIAGRAM #	QTY	MODEL #	DESCRIPTION
	3	SWX-221-B	Wireless Dual Technology (PIR/Acoustic) Occupancy Sensor, Small Motion, Ceiling Mount 360°
	1	SWX-854-B-xx	Wireless Remote Dimming Wall Station, <xx = color>
	1	SWX-950-D2	Wireless Power Pack w/ Dimming (0-10V), 120/277 VAC

SEQUENCE OF OPERATION

1. Lighting switched on automatically to full bright.
2. On/off & raise/lower control of lighting via dimmer switch.
3. Lighting turns off automatically after occupants leave the space.

ADDITIONAL DESIGN CONSIDERATIONS

1. If no reception or chairs are present, PIR only sensor is adequate, model **SWX-201-B**.
2. Maximum lighting level can be task tuned to increase energy savings.
3. If space has >150W of lighting in a daylight zone, add daylight harvesting photocell (model **SWX-250-B**).
4. To provide an occupancy contact closure signal to an HVAC system, change the power pack to a **SWX-950-AX-D2** model and add a **SWX-910-AR** auxiliary relay pack.
5. Although not required by code, receptacle control can be achieved by adding a **SWX-950** power pack.

SUPPORTED CODE REQUIREMENTS

Occupancy Sensor Control
9.4.1.1 (g), 9.4.1.1 (h), & 9.4.1.2 (b)

Auto On to Full Allowed
9.4.1.1 (h)

Manual Control - Switch
9.4.1.1 (a)


Manual Light Reduction Control - Dimmer
9.4.1.1 (a) & 9.4.1.1 (d)*

*RECOMMENDED BUT NOT REQUIRED BY CODE.



KEY

- TO LINE VOLTAGE CONNECTIONS
- TO 0-10V LIGHTING

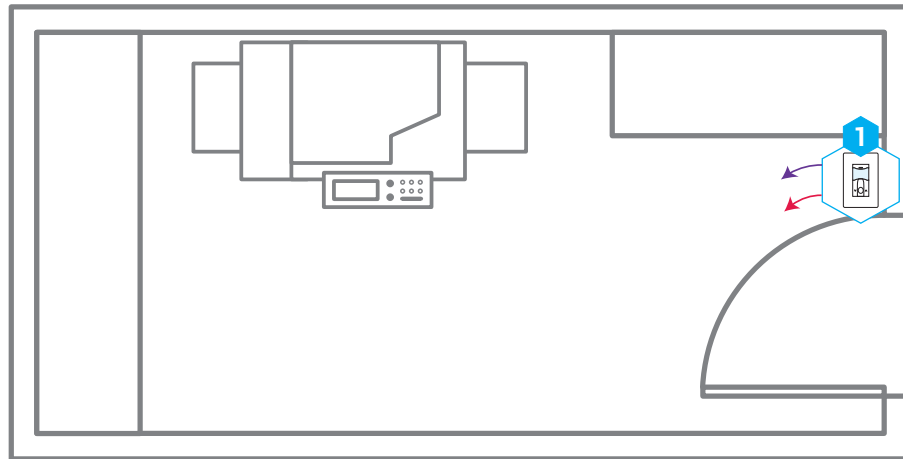

BILL OF MATERIAL

DIAGRAM #	QTY	MODEL #	DESCRIPTION
1	1	SWX-101-D-xx	PIR Wall Switch Occupancy Sensor w/ Dimming (0-10V), 120/277 VAC, <xx = color>

SEQUENCE OF OPERATION

- Lighting turns on automatically to 50% upon occupancy (default) or manually switched on to last user level.
- On/off & raise/lower control of lighting via dimmer switch.
- Lighting turns off automatically after occupants leave the space.

ADDITIONAL DESIGN CONSIDERATIONS

- Maximum lighting level can be task tuned to increase energy savings.
- For a compliant non-dimming solution, use a **SWX-103-xx**.
- Although not required by code, receptacle control can be achieved by adding a **SWX-900** power pack wired on the load side of the wall switch sensor.

SUPPORTED CODE REQUIREMENTS

Occupancy Sensor Control
9.4.1.1 (g), 9.4.1.1 (h), & 9.4.1.2 (b)

Manual Control - Switch
9.4.1.1 (a)


Manual On-Off/Partial Auto On
9.4.1.1 (b) & 9.4.1.1 (c)

Manual Light Reduction Control - Dimmer
9.4.1.1 (a) & 9.4.1.1 (d)*

*RECOMMENDED BUT NOT REQUIRED BY CODE



WIRELESS

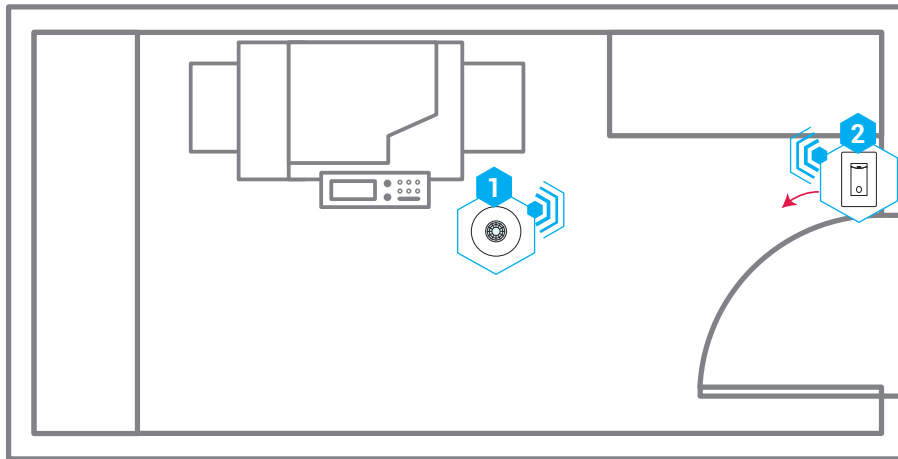

KEY

-  TO LINE VOLTAGE CONNECTIONS
 WIRELESS CONNECTION

BILL OF MATERIAL

DIAGRAM #	QTY	MODEL #	DESCRIPTION
1	1	SWX-201-B	Wireless PIR Occupancy Sensor, Small Motion, Ceiling Mount 360°
2	1	SWX-851-xx	Wireless Wall Switch Controller, 120/277VAC, No Neutral Required, <xx = color>

SEQUENCE OF OPERATION

- Lighting switched on manually via wall switch.
- Lighting turns off automatically after occupants leave the space.

ADDITIONAL DESIGN CONSIDERATIONS

- Alternative corner mount sensor model **SWX-401-B**.
- Although not required by code, receptacle control can be achieved by adding a **SWX-950** power pack.

SUPPORTED CODE REQUIREMENTS


Occupancy Sensor Control
9.4.1.1 (g), 9.4.1.1 (h), & 9.4.1.2 (b)

Manual On-Off/Partial Auto On
9.4.1.1 (b) & 9.4.1.1 (c)


Manual Control - Switch
9.4.1.1 (a)

Manual Light Reduction Control - Dimmer
9.4.1.1 (a) & 9.4.1.1 (d)*



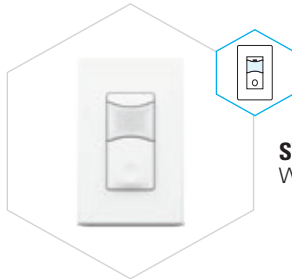

SWX-100 SERIES
Wall Switch Sensor

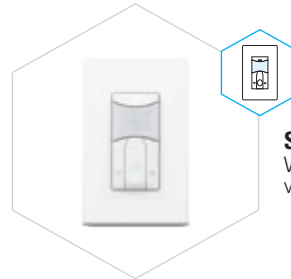

SWX-100-D SERIES
Wall Switch Sensor
with Dimming



SWX-200 SERIES
Ceiling Sensors




SWX-250 SERIES
On/Off &
Daylight Harvesting
Photocell




SWX-400 SERIES
Wideview &
Hallway Sensors



SWX-500 SERIES
Fixture Mount Sensors

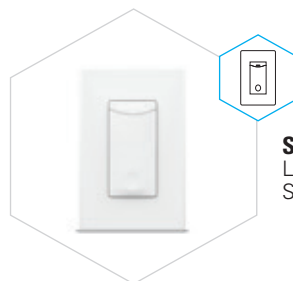

SWX-801
Low Voltage
Switch

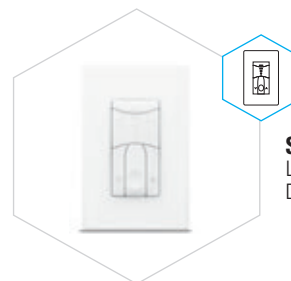


SWX-803
Low Voltage
Dimmer Switch




SWX-852
Wireless Switch



SWX-854
Wireless
Dimmer Switch

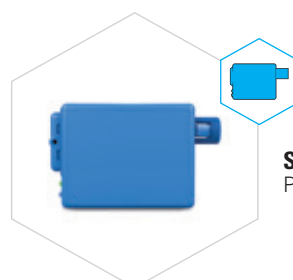

SWX-900 SERIES
Power Packs

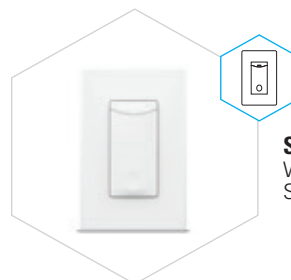

SWX-851
Wireless Load Control
Switch



SENSORWORX®

SENSORWORX.com



203.678.4224



2A RESEARCH PARKWAY, WALLINGFORD, CT 06492